

4100ES-S1

Brigade Interface Door Kit

INSTALLATION INSTRUCTIONS

These instructions cover fitting and wiring of the two different brigade interface doors to the 4100ES-S1 Fire Alarm System.

KIT CONTENTS

FP0935 FP,4100ES-S1 1976-174,ASE DOOR KIT

- 1 x 4U hinged door, with ASE cover and barrel nuts already fitted
- 1 x 3 way connector and 1 x 2 way connector for connection to the ASE when it is fitted
- 1 x FP0740 FAS interface module with red, yellow, blue and white wires
- 1 x pair of red and black wires for connecting the ASE to the 4100U-S1 DC supply
- 4 x M6 screws, washers and cage nuts for mounting the door
- 5 x Cable ties and adhesive cable tie holders for fastening the ASE wiring
- 1 x green earth lead + nut and washers to earth the door to the expansion bay
- 2 x M4 x 16 screws and crinkle washers to mount the ASE to the door
- 2 x ASE TNC Connect Insulation Bush to mount ASE Aerials
- 2 x ASE TNC Connect Insulation Washer to mount ASE Aerials

These installation instructions.

FP0937 FP,4100ES-S1 1976-174,WA/CUBE ASE DOOR KIT

- 1 x 4U hinged door with spacer bracket, connector strip, label and wiring already fitted
- 4 x M6 screws, washers and cage nuts for mounting the door
- 5 x Cable ties and adhesive cable tie holders for fastening the WA/CUBE ASE wiring
- 1 x green earth lead + nut and washers to earth the door to the expansion bay
- 4 x 3/8" PK screws for mounting the CUBE ASE on the spacer bracket
- 4 x 25mm male/female barrel nuts for the WA/CUBE ASE mounting option
- 4 x M4 x 10 screws with washers for mounting the WA ASE on the spacer bracket
- 3 x 15K resistors

These installation instructions and literature LT0316.

DOOR MOUNTING

Both types of brigade doors mount in the 4 unit space at the bottom of the 4100ES-S1 cabinet, using 4 x M6 screws, washers and cage nuts. Cage nuts should already be fitted to the 4100ES-S1 and screws supplied with it, but there are spare screws, washers and cage nuts supplied with this kit in case the others have been lost.

GENERAL WIRING

The WA/CUBE ASE should be powered from the fused DC distribution board on the power supply. It is recommended that the brigade device does not share its fuse protection with any other equipment, for reliability.

The wiring between the brigade device and the 4100ES-\$1 should be routed neatly as shown in the following drawings, and secured in place with the cable ties and adhesive tie holders supplied with the kits.

Fit the protective earth lead between the quick-connect tap on the brigade interface door and an unused stud in the lower right end of the expansion bay, using the nut and washers supplied with this kit.

WA/CUBE ASE MOUNTING

The WA ASE (Code Red III) or CUBE ASE must be obtained separately. The FP0937 brigade interface door is supplied assembled ready to take an WA ASE, which is fastened directly to the spacer bracket by four screws supplied with the kit. To mount a CUBE ASE, the spacer bracket must be removed and reassembled using the extra 25mm male/female barrel nuts supplied according to drawing 1976-174 sheet 5 on page 3. The CUBE ASE is fastened directly to the spacer bracket using four 3/8" PK screws supplied with this kit.

WA/CUBE ASE WIRING

For the WA ASE the pre-fitted wiring must be connected to the 4100ES-S1's Alarm Relay terminals as shown in 1976-174 sheet 5 on page 3. For the CUBE ASE the FP0740 FAS Interface Module connects to the 4100ES Alarm Relay Card. Set the three links on the 4100ES Alarm Relay card to the NO positions for a WA ASE and the NC positions for a CUBE ASE.

CENTAUR II ASE MOUNTING

The ASE unit must be obtained separately. If it is supplied complete with a body, this must be removed before fitting the ASE to the door. The ASE is fastened to the brigade interface door with the two M4 screws and crinkle washers in the kit. The antenna socket should be fitted to the tab on the door below the ASE position. See drawing 1976-174 sheet 1 on page 4 and the ASE installation instructions for details.

CENTAUR II WIRING

The FP0740 ASE FAS module must be connected to the 4100ES-S1's Alarm Relay terminals and the 2 way ASE connector as shown in 1976-174 sheet 1 on page 4. Set the three links on the Alarm Relay card to the NC positions.

Manufactured by:	Tyco Fire Protection Products	Distributed
	17 Mary Muller Drive, PO Box 19-545	by:
	Christchurch, New Zealand	
	Tel +64-3-389 5096	
	Fax +64-3-389-5938	



NEW ZEALAND. FAX:+64 3 3895096

INLY I TANTINO. I



