 


# HOW TO ORDER

## FP1600 and OMEGA 64

### FIRE ALARM SYSTEMS

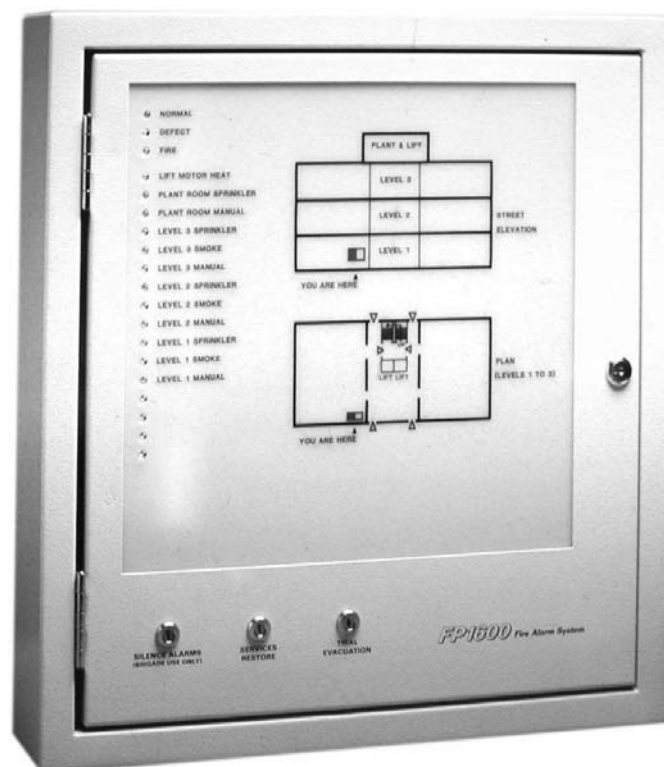

## CONTENTS

<b>INTRODUCTION .....</b>	<b>3</b>
<b>REAR SERVICE SYSTEMS .....</b>	<b>4</b>
<i>16 Zone Rear Service .....</i>	<i>4</i>
<i>32 Zone Rear Service .....</i>	<i>4</i>
<i>48 Zone Rear Service .....</i>	<i>4</i>
<i>64 Zone Rear Service .....</i>	<i>4</i>
<i>80 Zone Rear Service .....</i>	<i>4</i>
<i>96 Zone Rear Service .....</i>	<i>4</i>
<b>FRONT SERVICE SYSTEMS .....</b>	<b>5</b>
<i>16 Zone Front Service .....</i>	<i>5</i>
<i>32 Zone Front Service .....</i>	<i>5</i>
<i>48 Zone Front Service .....</i>	<i>5</i>
<i>64 Zone Front Service .....</i>	<i>5</i>
<i>80 Zone Front Service .....</i>	<i>5</i>
<i>96 Zone Front Service .....</i>	<i>5</i>
<b>EXTENSION OF 16 ZONE TO 32 ZONE .....</b>	<b>6</b>
<i>Rear Service .....</i>	<i>6</i>
<i>Front Service .....</i>	<i>6</i>
<b>BRIGADE INTERFACE DEVICES .....</b>	<b>6</b>
<b>TONE GENERATORS FOR ALERTING .....</b>	<b>6</b>
<b>LIST OF AVAILABLE PARTS &amp; ACCESSORIES .....</b>	<b>7</b>

## INTRODUCTION

The FP1600 Fire Alarm System is expandable from 16 to 96 zones and is available in both front service (F/S) and rear service (R/S) cabinet versions.

Systems are built up from multiple small format cabinets with a capacity of 16 zones each. Larger systems are built up by ordering and fitting additional parts as required. The parts to order for various size systems are listed and illustrated in this publication.

OMEGA 64 is the historical designation of the FP1600 in expanded 32-96 zone configuration. Larger format cabinets (32 zone) are no longer available.

## IMPORTANT NOTES

### 1. Use correct installation instructions

FP1600 systems must be assembled, installed, wired and programmed correctly to ensure safe and reliable operation. Do not attempt to install or program a system without reference to the manufacturer's instructions. Refer to the FP1600 Technical Manual (Part Number LT0196) for the correct assembly and installation information.

### 2. Thermal cutout for batteries wired in parallel

Where batteries are wired in parallel to obtain larger capacity, the installation instructions require a protective thermal cutout to be installed in series with each battery.

The ordering code for the thermal cutout is: SU0159 Thermal Cutout 10A, Type D. One cutout is required for each battery.

---

---

## REAR SERVICE SYSTEMS

**NOTE: Fire brigade signalling device, batteries, thermal cutouts, and alerting tone generators must also be ordered, as required.**

### 16 Zone Rear Service

The following parts need to be ordered:

1 x FP0547 Master FP1600 R/S with 16 zone index

### 32 Zone Rear Service

The following parts need to be ordered:

1 x FP0547 Master FP1600, R/S with 16 zone index

1 x KT0438 Upgrade Kit, R/S, 32 zone, includes cabinet

### 48 Zone Rear Service

The following parts need to be ordered:

1 x FP0547 Master FP1600 R/S with 16 zone index

2 x KT0215 Slave PCB set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

1 x SP0424 Empty Cabinet, R/S, 16 zone index

1 x FP0896 Empty Cabinet, R/S, PSU, 16 zone index

### 64 Zone Rear Service

The following parts need to be ordered:

1 x FP0547 Master FP1600, R/S with 16 zone index

3 x KT0215 Slave PCB Set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

2 x SP0424 Empty Cabinet, R/S, 16 zone index

1 x FP0896 Empty Cabinet, R/S, PSU 16 zone index

### 80 Zone Rear Service

The following parts need to be ordered:

1 x FP0547 Master FP1600, R/S with 16 zone index

4 x KT0215 Slave PCB Set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

1 x LM0073 FRC Loom, 20 way, 1500mm

2 x SP0424 Empty Cabinet, R/S, 16 zone index

2 x FP0896 Empty Cabinet, R/S, PSU, 16 zone index

### 96 Zone Rear Service

The following parts need to be ordered:

1 x FP0547 Master FP1600, R/S with 16 zone index

 
 
 
 
 
 
5 x KT0215 Slave PCB Set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

2 x LM0073 FRC Loom, 20 way, 1500mm

3 x SP0424 Empty Cabinet, R/S with 16 zone index

2 x FP0896 Empty Cabinet, R/S, PSU, 16 zone index

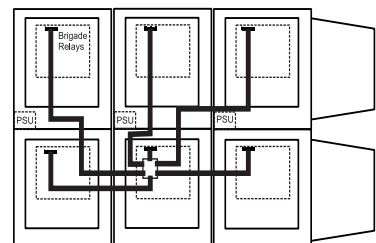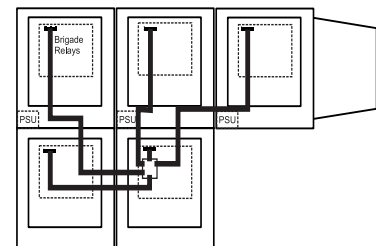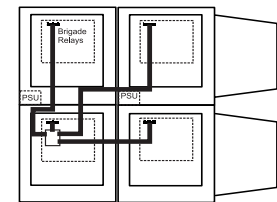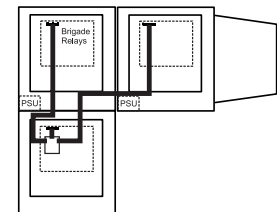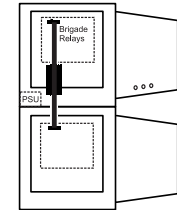

## FRONT SERVICE SYSTEMS

**NOTE: Fire brigade signalling device, batteries, thermal cutouts, and alerting tone generators must also be ordered, as required.**

### 16 Zone Front Service

The following parts need to be ordered:

1 x FP0548 Master FP1600 F/S with 16 zone index

### Zone Front Service

The following parts need to be ordered:

1 x FP0548 Master FP1600, F/S with 16 zone index

1 x KT0439 Upgrade Kit, F/S, 32 zone, includes cabinet

### 48 Zone Front Service

The following parts need to be ordered:

1 x FP0548 Master FP1600 F/S with 16 zone index

2 x KT0215 Slave PCB set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

1 x SP0425 Empty Cabinet, F/S, 16 zone index

1 x FP0897 Empty Cabinet, F/S, PSU, 16 zone index

### 64 Zone Front Service

The following parts need to be ordered:

1 x FP0548 Master FP1600, F/S with 16 zone index

3 x KT0215 Slave PCB Set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

2 x SP0425 Empty Cabinet, F/S, 16 zone index

1 x FP0897 Empty Cabinet, F/S, PSU, 16 zone index

### 80 Zone Front Service

The following parts need to be ordered:

1 x FP0548 Master FP1600, F/S with 16 zone index

4 x KT0215 Slave PCB Set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

1 x LM0073 FRC Loom, 20 way, 1500mm

2 x SP0425 Empty Cabinet, F/S, 16 zone index

2 x FP0897 Empty Cabinet, F/S, PSU, 16 zone index

### 96 Zone Front Service

The following parts need to be ordered:

1 x FP0548 Master FP1600, F/S with 16 zone index

 
 
 
 
 
 
5 x KT0215 Slave PCB Set

1 x KT0131 Kit, Comms Extender for 2+ Slaves

2 x LM0073 FRC Loom, 20 way, 1500mm

3 x SP0425 Empty Cabinet, F/S with 16 zone index

2 x FP0897 Empty Cabinet, F/S, PSU, 16 zone index

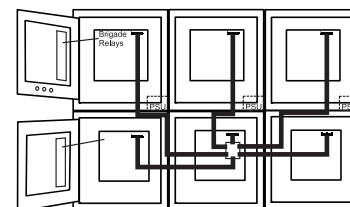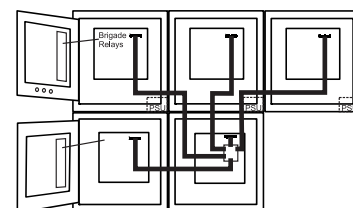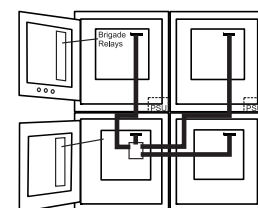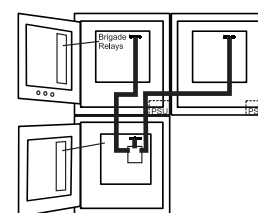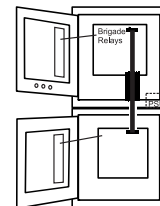

## EXTENSION OF 16 ZONE TO 32 ZONE

### ***Rear Service***

The following parts need to be ordered:

KT0438 KIT, FP1600, UPGRADE TO 32 ZONES, R/S, INCL CABINET.

This kit comprises:

1 x KT0142 Kit, FP1600 MkII or MkIII upgrade to 32 zones

This kit contains:

1 x Master Software (for MkII systems)

1 x Loom Master - First Slave

1 x Slave PCB set (with two LED loom options)

1 x FP1600/OMEGA 64 Zone Numbering Label Set

1 x FP1600/OMEGA 64 Install/Configuration Manual

1 x FP1600/OMEGA 64 Diagnostics Label

1 x FP1600 32 Zone Upgrade Installation Instructions

1 x SP0424 FP1600 R/S Empty Cabinet, 16 Zone Index

### ***Front Service***

KT0439 KIT, FP1600, UPGRADE TO 32 ZONES, F/S, INCL CABINET.

This kit comprises:

1 x KT0142 Kit, FP1600 MkII or MkIII upgrade to 32 zones

This kit contains:

1 x Master Software (for MkII systems)

1 x Loom Master - First Slave

1 x Slave Board set (with two LED loom options)

1 x FP1600/OMEGA 64 Zone Numbering Label Set

1 x FP1600/OMEGA 64 Install/Configuration Manual

1 x FP1600/OMEGA 64 Diagnostics Label

1 x FP1600 32 Zone Upgrade Installation Instructions

1 x SP0425 FP1600 F/S Empty Cabinet, 16 Zone Index

## BRIGADE INTERFACE DEVICES

The following parts need to be ordered:

PA0862 PCB Assembly, General Purpose SGD (with switches)

Used for connection to ATS.

PA0861 PCB Assembly, General Purpose Brigade Relay Interface

Used (with suitable transmitter) for any other remote connection type.

 
## TONE GENERATORS FOR ALERTING

For new installations tone generator(s) will also be required for driving loudspeakers as alerting devices. Suitable products include:


PA1025 20W Mini-Gen Tone Generator, 12V

**LIST OF AVAILABLE PARTS & ACCESSORIES**


FP0547 Master FP1600, R/S with 16 zone index  
Complete with Master PCB set

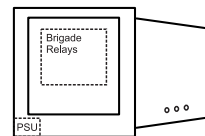

 
FP0548 Master FP1600, F/S with 16 zone index  
Complete with Master PCB set

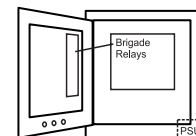

 
SP0424 FP1600 R/S Empty Cabinet, C/W Index

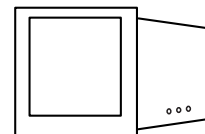

 
SP0425 FP1600 F/S Empty Cabinet, C/W Index

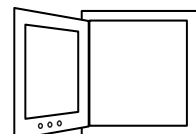

 
FP0896 FP1600 Empty Cabinet, R/S with PSU and 16 zone index

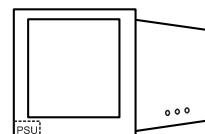

 
FP0897 FP1600 Empty Cabinet, F/S with PSU and 16 zone index

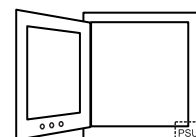

 
KT0216 Master PCB set (for zones 1 to 16)  
This kit contains:  
Master PCB (F/S or R/S)  
LED board (break-off)  
FRC Looms  
Replacement Gear Plate for older systems

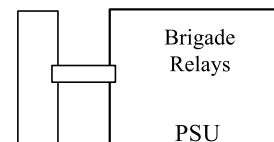

 KT0215 Slave Extender PCB set  
Ignore PSU for zones 17-32, 49-64, or 81-96  
Use PSU for zones 33-48, 65-80  
This kit contains:  
Slave PCB (fits on F/S or R/S)  
LED board (break-off)  
FRC Looms

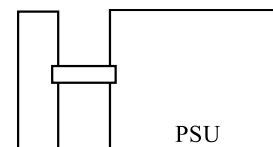

 KT0131 Kit, Comms Extender for 2+ Slaves  
PA0771 Comms Interface PCB  
FRC: 1 x 250mm, 1 x 400mm, 2 x 1500mm  
4 x PCB Standoffs

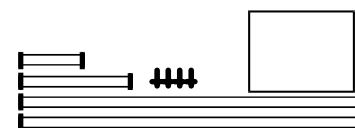


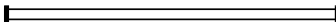

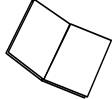

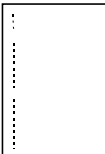
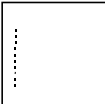
KT0142 Kit, FP1600 MkII or MkIII, upgrade to 32 zones  
See page 6 for contents



KT0438 = KT0142 + SP0424 (see page 6)

KT0439 = KT0142 + SP0425 (see Page 6)

**LIST OF AVAILABLE PARTS & ACCESSORIES (Cont'd)**

LM0074	Loom Master - First Slave	
LM0073	FRC Loom, 20 Way, 1500mm	
SF0217	Software, OMEGA 64, Master V3.01, OTPROM (MkII only)	
SF0218	Software, OMEGA 64, Slave V3.01 OTPROM (MkII only)	
LT0196	Literature, FP1600/OMEGA 64 Technical Manual	
LT0199	Literature, FP1600 32 Zone Upgrade Installation Instructions	
LT0200	Literature, How to Order FP1600 Fire Alarm Panels	
LT0312	Literature, FP1600/OMEGA 64 Install/Config Manual	
LB0589	Label, OMEGA 64 Diagnostics/Operation	
LB0537	Label, OMEGA 64 Zone Numbering	
SU0159	10A Thermal Cutout (see note on page 3)	
FA1371	Fabrication, OMEGA 64, R/S Index (Master 32 zone)	
FA1372	Fabrication, OMEGA 62, F/S Index (Master 32 zone) (spares only for earlier cabinets)	
FA1379	Fabrication, OMEGA 64, R/S Index (Extender 16 zone)	
FA1380	Fabrication, OMEGA 64, F/S Index (Extender 16 zone) (spares only for earlier cabinets)	