



Simplex Fire Products - Fault & Assistance Guide



1.0	Identifying Simplex® 4100 Series Faults	3
1.1	4100 SERIES - OVERVIEW	4
1.2	4100U BASIC OPERATIONS	5
1.3	OPERATOR INTERFACE COMMANDS	6
1.1.1	Resetting 4100 Latched Faults & Rebooting CPU	7
1.4	INDEX – QUICK VIEW	8
1.1.2	Loop Card Faults	9
1.1.2.1	Card Missing/Failed	10
1.1.2.2	Correct Card Abnormal	10
1.1.2.3	Short Circuit Abnormal	10
1.1.2.3.1	Class ‘A’ Abnormal	11
1.1.2.3.2	Channel Failure Abnormal	11
1.1.2.3.3	Channel Initialization Abnormal	11
1.1.2.3.4	Extra Device	12
1.1.2.3.5	IDNet Dipswitch Settings	12
1.1.3	Addressable Device Faults	13
1.1.3.1.1	No Answer	13
1.1.3.1.2	Head Missing	14
1.1.3.1.3	Wrong Device	15
1.1.3.1.4	Bad Answer	16
1.1.3.1.5	Extra Device	17
1.1.3.1.6	Output Abnormal	18
1.1.3.1.7	Alarm Verification Tally Exceeded	18
1.1.3.1.8	Detector LED Operation	18
1.1.3.1.9	Device DIP Switch Settings	18
1.1.3.1.10	End of Line Resistors	19
1.1.5	4100-0157A Battery Charger Faults	21
1.1.6	Positive/Negative Earth Ground Faults	23
1.1.6.1	Earth Ground Fault Detecting and Locating	23
2.0	4100 Crash Codes – General Information	25
2.1	4100 CRASH CODES – GENERAL INFORMATION	26
2.2	4100-FAMILY GENERAL CRASH CODES TABLE	27
2.3	4100-FAMILY GENERAL CRASH CODES TABLE (CONTINUED)	28
3.0	Identifying Faults on the GCC, IMS & TrueSite Graphics & Network	29
3.1	IDENTIFYING FAULTS ON THE GRAPHICS – GENERAL INSTRUCTIONS	30
3.1.1	<i>GCC, IMS & TrueSite Workstation Graphical Control Centre</i>	30
3.2	DISPLAYED FAULT FORMAT	31
3.2.1	<i>Fault Type</i>	32
3.3	NETWORK FAULTS	33
3.3.1	<i>Common Trouble Point for Node</i>	33
3.3.2	<i>Card Trouble for Node</i>	33
3.3.3	<i>Network Operating in Degraded Style 7</i>	33
3.3.4	<i>Network Initialization Incomplete</i>	33
3.3.5	<i>Node Missing/Failed</i>	33
3.3.6	<i>System Pseudo Status for Node</i>	33
3.3.7	<i>Version Mismatch</i>	33

4.0	Identifying F3200 Faults	34
4.1	RECALL SYSTEM FAULTS	35
	4.1.1 <i>Function</i>	35
	4.1.2 <i>Operating Sequence</i>	35
4.2	LIST OF SYSTEM FAULTS – NON-NETWORKED	36
4.3	GLOSSARY OF ABBREVIATIONS	39
5.0	Identifying faults on a QE90	41
5.1	QE90 SERVICE ISOLATION MODE – FAULT DISPLAY	42
5.2	ECP VERSIONS 2.xx/4.xx/6.xx – SYSTEM FAULT DISPLAY	43
5.3	AUDIO LINE FAULT	45
	5.3.1 <i>Speaker Line Fault/Amp Fault</i>	45
	5.3.2 <i>Amplifier LED Configurations</i>	45
	5.3.3 <i>Speaker Tapping Adjustments</i>	46
5.4	STROBE LINE FAULT	47
	5.4.1 <i>Strobe Output Considerations</i>	47
	STROBE RELAY DRIVER MODULE AND STROBE LIGHT CONNECTION	48
	5.4.2 <i>Cable Sizing</i>	48
	TABLE 1: CABLE GAUGES	48
	5.4.3 <i>Links and DIP Switches</i>	49
	TABLE 2: LINK SETTINGS AND THEIR CORRESPONDING OUTPUTS	49
	TABLE 3: DIP SWITCHES 1 – 4 – SELECT CARD ADDRESS	49
	TABLE 4: DIP SWITCHES 5 – 8 – SELECT MODE FOR POWERED OUTPUTS	50
	5.4.4 <i>STBM9008 Board Installation</i>	50
5.5	BGA OR FIP FAULT	51
	TABLE 5: DIP SWITCH SETTINGS	51
5.6	WIP LINE FAULT	52
5.7	PA SPEECH, SPARE SPEECH, WIP SPEECH, COMMS AND SPARE COMMS CABLE FAULTS	53
5.8	ECP FAILURES	54
	5.8.1 <i>MECP and SECP Failure</i>	54
	5.8.2 <i>WIP MECP and SECP Failure</i>	54
	5.8.3 <i>Paging Console Failure</i>	54
5.9	ECM NETWORKED SYSTEMS	54
5.10	ECM NETWORKED SYSTEM – SYSTEM FAULT DISPLAY	55
5.11	QE90 FAULT REGISTER	56
6.0	National Contact Directory	59
6.1	CONTACT US	60

1.0 Identifying Simplex® 4100 Series Faults

1.1 4100 Series - Overview

The 4100 Series was released onto the Australian Market in 1990. The first version supported 512 devices or points. It was replaced with the 4100+ in 1993, which supported 1000 points & the networking of up to 99 panels. The 4100A was a localized version of the 4100+ & has the FireFighter Interface as per AS4428.1. All versions use the same metalwork & expansion cards.

In 2004, the 4100U was released. This is the new generation of 4100 series panels & has many new software features & new, smaller expansion cards. It is still fully compatible with the old 4100 expansion cards. The visible difference is the 4100U has raised rubber keys on the Operator Interface.

What is it? It is a fully modular Fire Detection & Control System. From 8 conventional circuits through to 2,000 conventional, addressable or a mix input & output of circuits, you simply add cards & cabinets to house them – up to 119 cards per CPU. Connection between cabinets (that are part of the same unit) is a multi-conductor harness, containing power & communications.

The 4100 series supports up to 31 remote units via an RUI (Remote Unit Interface). A unit can be 4100 cabinets full of cards, a mimic panel - up to 2000 LEDs & switches (2 or 3 position switches), a remote LCD, flatpack 24Point I/O modules (multiple flatpack I/O modules located together count as 1 unit). A system can have up to 4 RUI loops per CPU.

For larger or multi-building sites, multiple 4100 series panels can be networked together, up to 99 panels or PC based graphic stations (each panel or station is called a Node)

The 4100 series has comprehensive built in diagnostics & the ability to display all details of each card & addressable device. While the diagnostic & detail display details are beyond this guide's intent, a full range of technical information is available on the Simplex website: www.simplexfire.com.au

Each 4100 consists of a CPU Card & up to 119 addressable expansion cards:

- 5004 - 8 conventional monitor zones [ZN].
- 3003 - 8 SPDT relays [AUX] & 8 feedback inputs [FB].
- 4321 - 6 supervised relay outputs [SIG].
- 3024 - 24 input or output relays [I/O].
- 0157 - Power supplies.
- 0110 - MAPnet addressable loop [M].
- 0113 - Dual RS232/2120 interface [PORT].
- 0304 - Remote sub-panel/LCD/mimic panel interface [RUI].
- 0154 – VESDA High Level Interface.
- 0301 - 64 LED/64 switch controller.
- 1288 - 64/64 Led Switch Controller
- 3101AU - 250 Point IDNET Addressable Loop PDI [ID]
- 0160 - Fire Panel Internet Interface Module
- 0620 - 4100U Basic Transponder Interface Card
- 0302A - 6 EWIS amplifier interface.
- 0205A - Master WIP phone.

Note: The cards listed above are the most commonly used types.

The 4 digit number is the card type & the identifier in square brackets is the physical point type.

Examples:

The first 5004 card contains points ZN1 to ZN8, the second 5004, ZN9 to ZN16.

The first 3024 card contains points I/O1 to I/O24, the second 3024, I/O25 to I/O48.


The first 0110 card contains points M1-1 to M1-127, the second 0110, M2-1 to M2-127.

1.2 4100U Basic Operations

The Fire Panel display consists of two sections – the Operator Interface (upper section) and the Zone Isolate pushbutton switches & indicators (lower section). Fire detectors are grouped into zones (searchable grouped areas). Zones can be Isolated by pressing the zone’s isolate pushbutton on the panel – this prevents an alarm in that group from activating the panel outputs. When a non-isolated detector detects an alarm, the fire panel rings the bell, calls the fire brigade, and activates the Warning or Evacuation System along with any other programmed functions (site specific).

The Operator Interface indicates common Alarm, Fault & Isolation Status on LEDs, and point (detector) status on the LCD. When an Alarm, Fault or Isolation occurs, the buzzer will operate until the corresponding ‘Acknowledge’ (e.g. Fire Alarm Ack) key is pressed.

The panel is reset by pressing ‘System Reset.’ If the alarm won’t reset the point may still be activated (i.e. detector is still in alarm). Press ‘Fire Alarm Ack’ when the point alarm is displayed, then press ‘Disable,’ ‘Enter.’ Press ‘Fault Ack’ (to acknowledge the fault caused by disabling a point), then press SYSTEM RESET again. The disabled detector must be re-enabled when the condition is cleared.

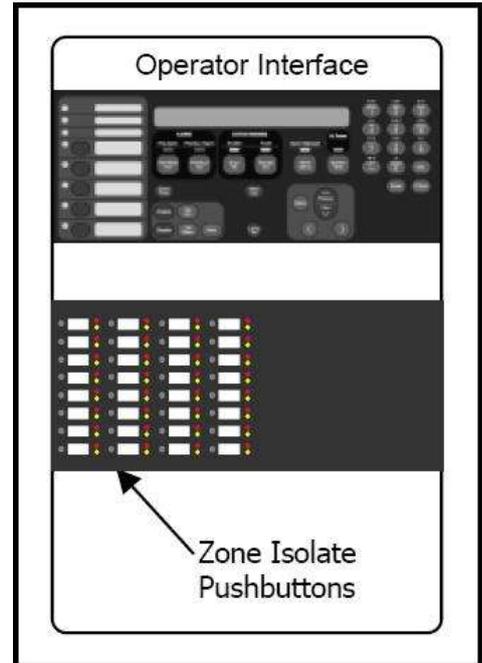

1.3 Operator Interface Commands

The table shown below includes some general front panel commands for quickly navigating through system components. In addition output points can be controlled by following the below steps then commanding the point via the On/Off/Auto keys. Manually controlling output points will create a fault on the LCD display, and to clear these faults each manually altered output will need to be set back to its AUTO state.


Press These Keys to Select Points	Enter Point Data
ZONE + Number + Enter (4100A Only)	Enter the <i>number</i> of a zone. After pressing enter, use the Previous/Next keys to scroll through the zone points.
SIG + Number + Enter	Enter the <i>number</i> of a signal circuit
AUX + Number + Enter	Enter the <i>number</i> of an auxiliary relay point
FB + Number + Enter	Enter the <i>number</i> of a feedback point
IO + Number + Enter	Enter the <i>number</i> of a 24-Point I/O point
IDNet (4100U) / Mapnet (earlier 4100) + Channel-Device + Enter	For <i>Channel (loop)</i> , enter the <i>number</i> of the IDNet, MAPNET, or VESDA channel. Insert a dash using the NET key. Enter the <i>number</i> of the addressable device.
P + Number + Enter	Enter the <i>number</i> of a digital pseudo point
A + Number + Enter	Enter the <i>number</i> of an analog pseudo point
L + Number + Enter	Enter the <i>number</i> of a list pseudo point
NET + Number + Enter	Enter the <i>number</i> of the network node. When the screen prompts you to select the type of point (Zone, Signal, etc.), press the Entry Keypad key corresponding to that type of point, enter the <i>number</i> of the point, and press Enter.
ADDR + Card-Point-Subpoint + Enter	Enter the <i>number</i> of the card, insert a dash (using the NET key), and enter the <i>number</i> of the subpoint.

1.1.1 Resetting 4100 Latched Faults & Rebooting CPU

When fault finding the Simplex® 4100U Fire Detection Panel some IDNet/MAPNet & RUI faults will 'latch' and not clear without the use of the 'System Reset' button (described on a previous page). If all else fails, to clear latched faults or some networking issues it may be warranted to use a CPU Reboot otherwise known as a Warm-Start.

To perform a Warm-Start, gain access to the CPU card. The CPU card is generally the only legacy card (vertically mounted) with its components side facing in a different direction (relative to other cards mounted in a similar fashion) – otherwise it will be the only card in the panel with a small, flat and round ram battery located on it. Once located, find the small push-button switch located on the bottom edge of the card (4100U CPU card shown below). Push this button and the panel will then reinitialize. Allow 2-5mins for the panel to become fully active and re-establish communications with all its associated devices.

NOTE: Starting the panel from a powered-down state is referred to as a cold-start.

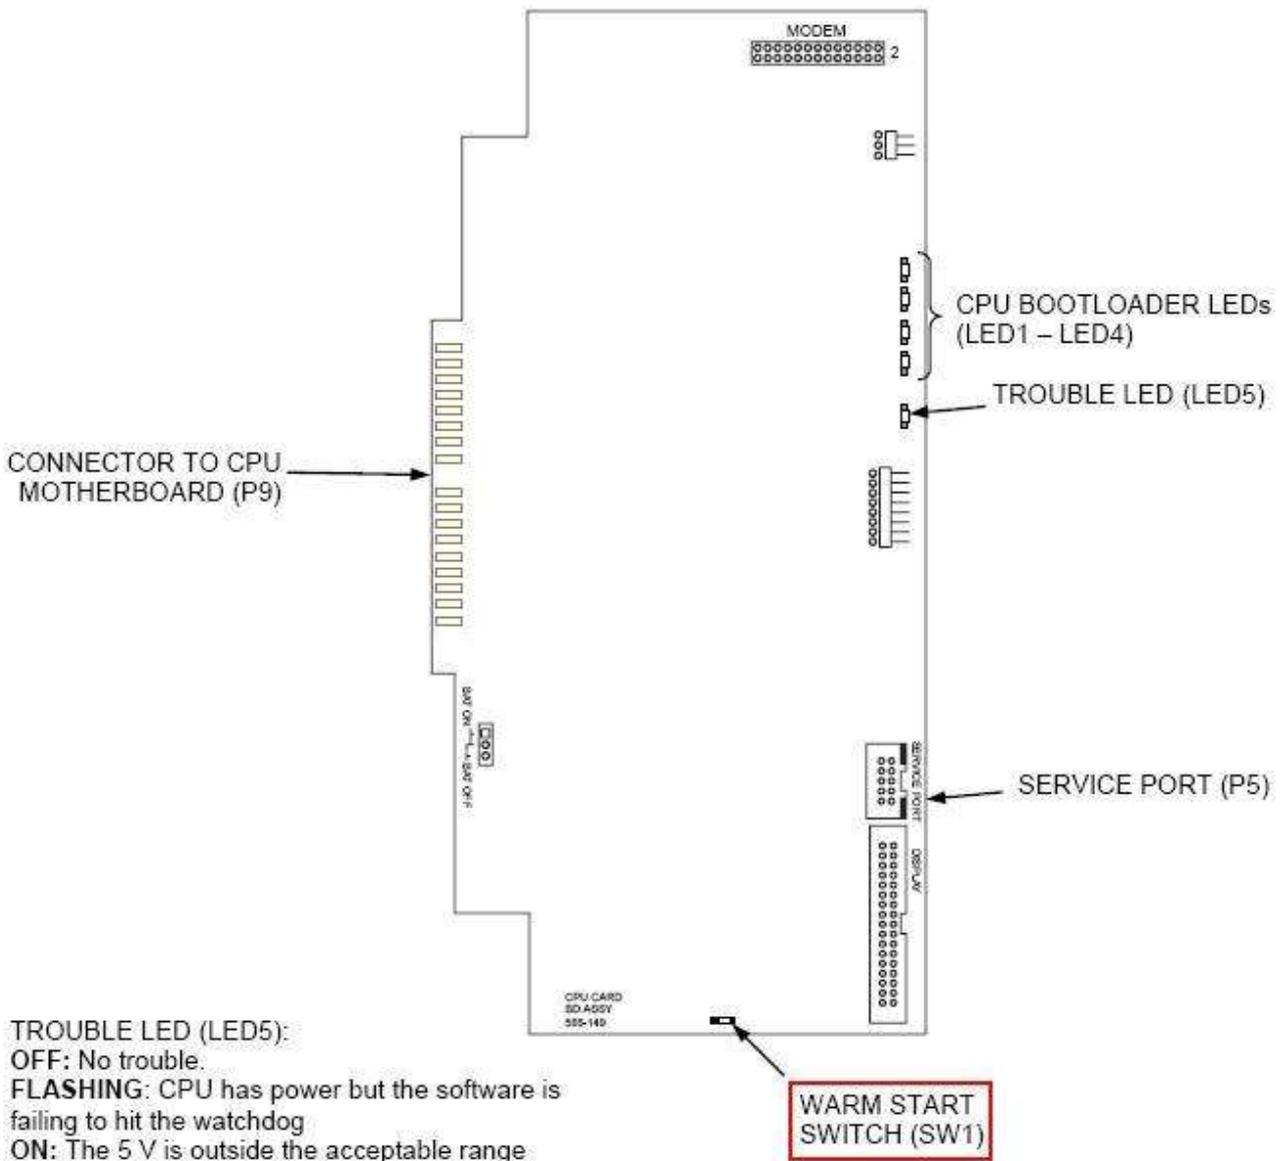

1.4 Index – Quick view

Loop Card Faults

- Card Missing Failed (Card Inserted)
- Correct Card
- Short Circuit
- Class A
- Channel Failure
- Channel Initialization
- Extra Device
- Card DIP Switch



NOTE - It is vital that the Loop card is in NORMAL status before addressable device fault finding is started.

Addressable Device Faults

- No Answer
- Head Missing
- Wrong Device
- Bad Answer
- Extra Device
- Output Abnormal
- Detector LED Operation
- Device LED Operation
- DIP Switch Table
- End of Line Resistor Values.
- Hints & Tips

1.1.2 Loop Card Faults

Description:

If the Loop card (MAPNET or IDNET) is in an ABNORMAL (FAULT) state, all devices on that loop will be displayed as NORMAL.

This NORMAL indication is used to reduce the number of faults when a Loop is not working as all devices would be displayed as NO ANSWER.



NOTE - It is vital that the Loop card is in NORMAL status before addressable device fault finding is started.

To confirm a Loop card is in NORMAL status:

- Press the MENU button.
- Scroll through the options until CARD STATUS is reached.
- Press the ENTER button
- Scroll through the cards in the panel. Confirm that each loop card is NORMAL.
- If **CARD MISSING FAILED ABNORMAL** then press ENTER and Scroll through card faults.
- Refer to the relevant section for fault descriptions.
- IDNet Loop Voltage = approx 24vDC normally & 30vDC when the panel is in alarm
- MAPNet Loop Voltage = approx 36vDC at all times.

Note: IDNet & MAPNet Loop Voltages are fluctuating DC because the Loop Voltage is modulated to transmit the data.

1.1.2.1 Card Missing/Failed

Description:

The circuit card is not communicating correctly with the panel controller.

Possible causes:

- Card has not been fitted
- Card is not seated correctly on connector
 - Power down panel, clean connectors and reinsert
- Card has not been addressed correctly
- Card DIP Switch incorrectly set (Dipswitch 1 always in ON position)
- Another card has been addressed the same as this card
- Card has failed

1.1.2.2 Correct Card Abnormal

Description:

The wrong type of card has been addressed at this location.

Possible causes:

- Incorrect card fitted in the panel.
- Two cards have the same address.

1.1.2.3 Short Circuit Abnormal

Description:

The addressable loop has a short circuit or the + and – wires are crossed over.

Possible causes:

- If there are no isolators fitted or the short is between the panel and the isolator then the loop will stop operating. This may also display a channel fail
- Find the short circuit and fix – disconnect the loop totally, check each pair for a short circuit with a Multimeter. If fault evident continue these checks at half way points around loop until short is narrowed down
- If short circuit cannot be detected with a Multimeter, disconnect one side of the loop only and disconnect devices at half way points until the short circuit fault clears, to narrow down the fault location.

NOTE: *Panel will need to be reset between each disconnection as this fault will latch*

1.1.2.3.1 Class 'A' Abnormal

Description:

The addressable loop or RUI Bus has an open circuit.

Possible causes:

- Open circuit in the wiring loop
- Bad connection at addressable point (on addressable loop faults).
- Bad connection at remote transponder or LCD Annunciator (for RUI Bus faults)
- Faulty addressable loop or RUI card
 - Check this fault by 'looping out' the A and B terminals on the RUI/Mapnet/IDNet card to clear the fault. If fault does not clear then card may be faulty

1.1.2.3.2 Channel Failure Abnormal

Description:

The Loop card cannot communicate with any device on the loop. Be aware all devices associated with this loop will indicate a 'Normal' state to prevent multiple faults per display.

Possible causes:

- The Loop has a Short circuit
- The Loop has an Earth fault
- The Loop is not connected or incorrectly connected

1.1.2.3.3 Channel Initialization Abnormal

Description:

This fault typically occurs at startup with IDNet loops and will normally clear after a couple of minutes if a lot of Isolators are fitted.

Possible causes:

- If the fault continually re-appears the loop length maybe too long or too noisy – Contact your local Simplex® branch for assistance
- Possible bad device causing communication errors
 - Disconnect devices at half way points until the fault clears to locate the faulty device

1.1.2.3.4 Extra Device

Description:

A device is located on the addressable loop that is addressed at a location that is not programmed.

Possible causes:

The panel has identified a device/card at an address that is not in the panel programming. Refer to the Extra Device section of Device Faults (Page 20).

A card/device may be incorrectly addressed bringing up an Extra Device fault and the programmed device's address will display "Points defined but not inserted."

1.1.2.3.5 IDNet Dipswitch Settings

1. Devices are supplied with DIPSWITCH switch ALL ON (set to 0)
2. DIPSWITCHES are labeled 1 to 8
 - Switch 1 = MUST BE ON (OFF disables card communications)
 - Switch 2 = 64
 - Switch 3 = 32
 - Switch 4 = 16
 - Switch 5 = 8
 - Switch 6 = 4
 - Switch 7 = 2
 - Switch 8 = 1
3. Turn Switch **OFF** to add the above number to the address.

Examples:

- Address 5 = Switch 6 & 8 OFF all others ON.
- Address 23 = Switch 4, 6, 7 & 8 OFF others ON.

***NOTE - This is reverse of how the addressable devices addresses' are set.
[Refer to section 1.1.3.9 – page 19]***

1.1.3 Addressable Device Faults



NOTE - It is vital that the Loop card is in NORMAL status before addressable device fault finding is started.

To confirm a Loop card is in NORMAL status:

- Press the MENU button.
- Scroll through the options until CARD STATUS is reached.
- Press the ENTER button
- Scroll through the cards in the panel. Confirm that each loop card is NORMAL.
- If **CARD MISSING FAILED ABNORMAL** then press ENTER and Scroll through card faults.
- Refer to the relevant section for fault descriptions.
-

1.1.3.1.1 No Answer


Description:

The panel has a device programmed at the address displayed that is not responding.

Possible causes:

1. Device is not fitted or wiring not correctly terminated.
2. Addressable loop is not working correctly (loop is broken)
3. Faulty base or device

Suggested solutions:

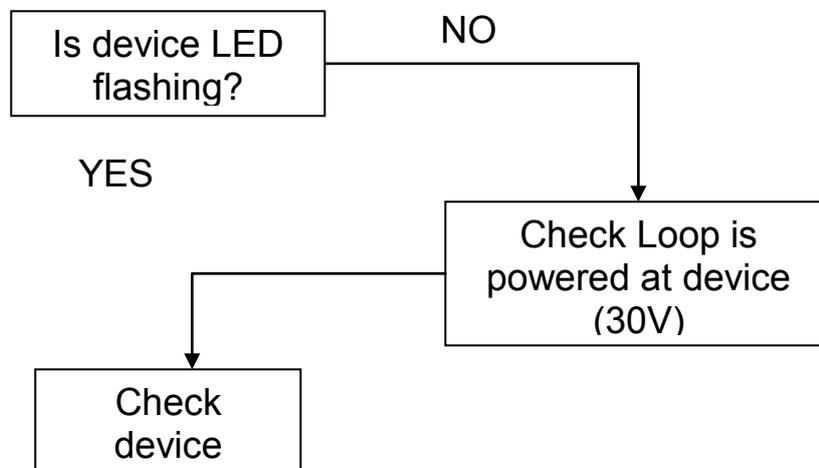

1.1.3.1.2 Head Missing


Description:

The panel is seeing the base at the displayed address but is not seeing the head (Sensor).

Possible causes:

- Head is not installed.
- Head is not fully twisted onto the base
- Detector terminals on the base are loose
- Faulty Head
- Faulty Base

Suggested solutions:

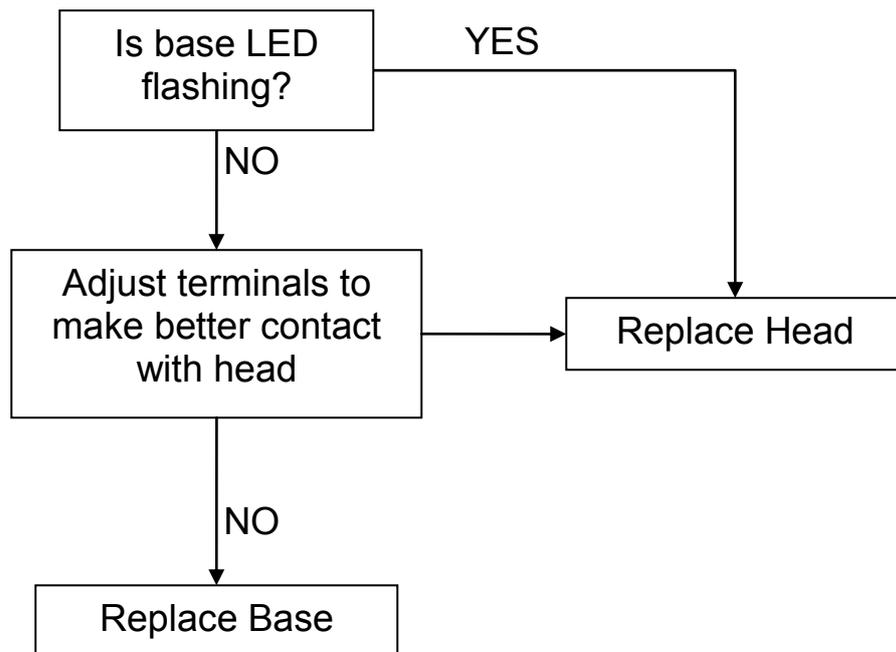

1.1.3.1.3 Wrong Device


Description:

The panel is getting a response from the displayed address that does not match the device programmed to that address.

Possible causes:

- Incorrect device installed (Relay with T-Sense fitted instead of standard Relay)
- Incorrect head installed (Photo instead of Heat)
- Detector head not making good contact with base

Suggested solutions:

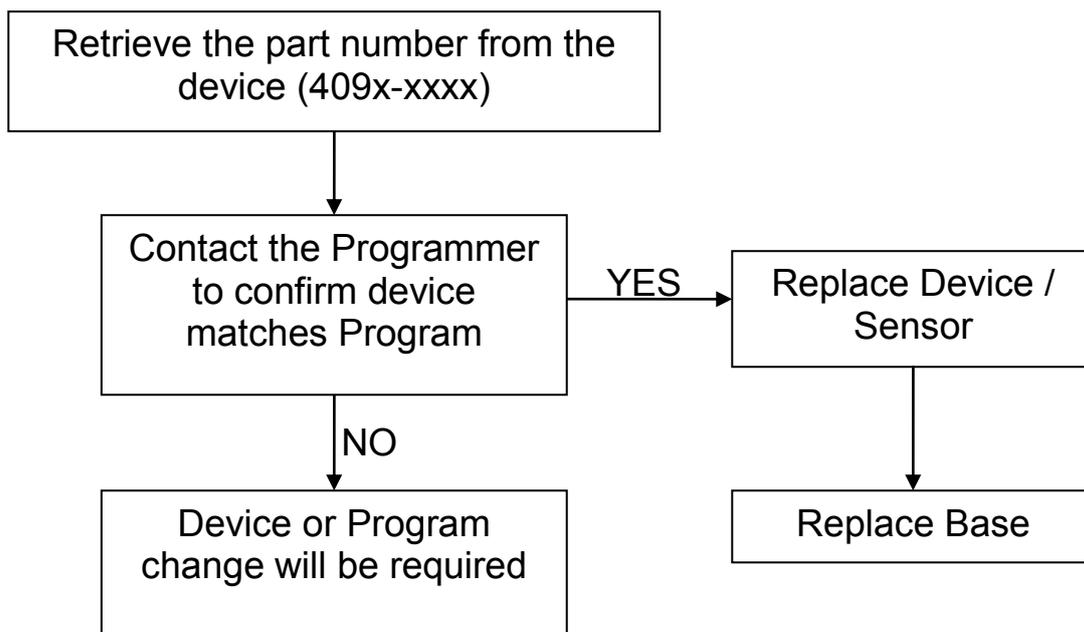

1.1.3.1.4 Bad Answer


Description:

The panel is getting a response from the displayed address that sometimes does not match the device programmed to that address.

Possible causes:

- Two devices are programmed with the same address.
- These devices will most likely be two different device types.
- Water damaged device, or wiring.
- Electrical Interference

Suggested solutions:

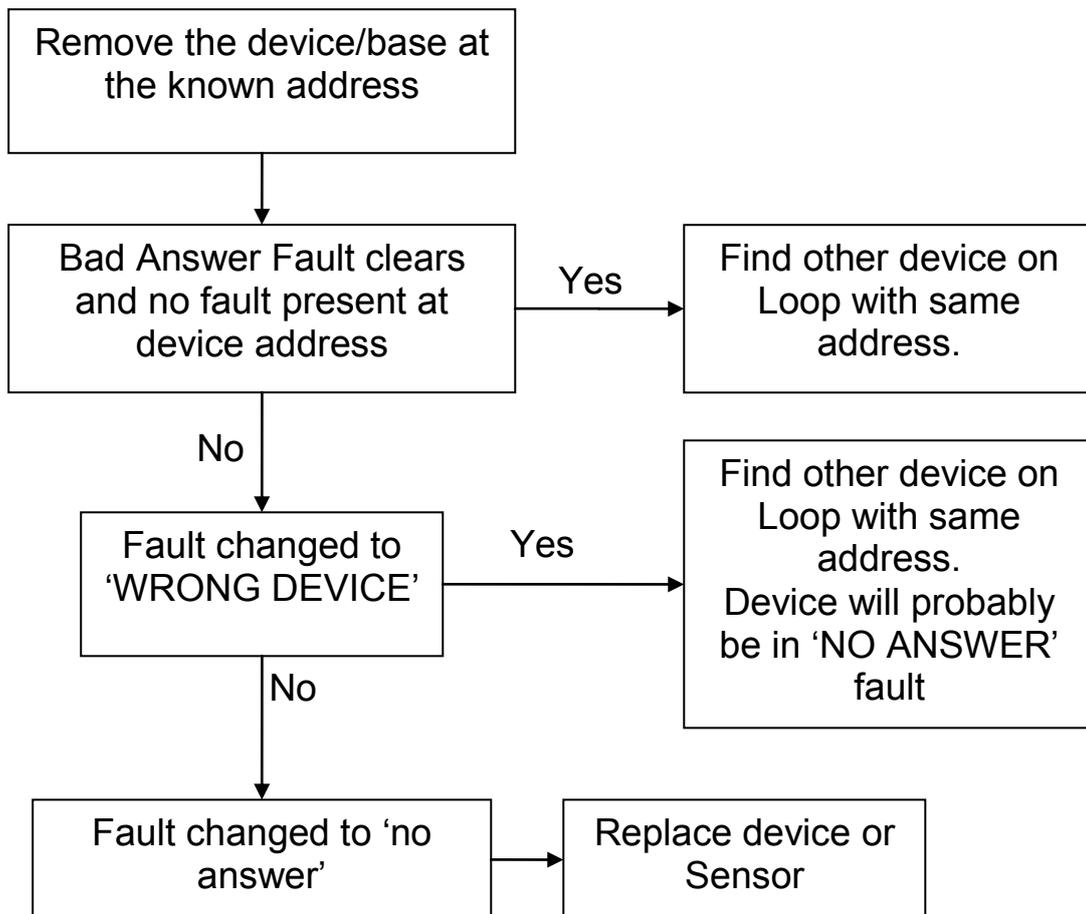

1.1.3.1.5 Extra Device

Description:

The panel has identified a device at an address that is not in the panel programming.


NOTES: *Only one extra device per loop is ever displayed. Fixing one extra device may display a new extra device fault (if present)*

Extra Device Faults take a longer time to appear and clear than other faults.

Possible causes:

- Device not added to the program
- Device addressed incorrectly
- Device not programmed at all (IDNet address 255, MAPNet address 0)

Suggested solutions:

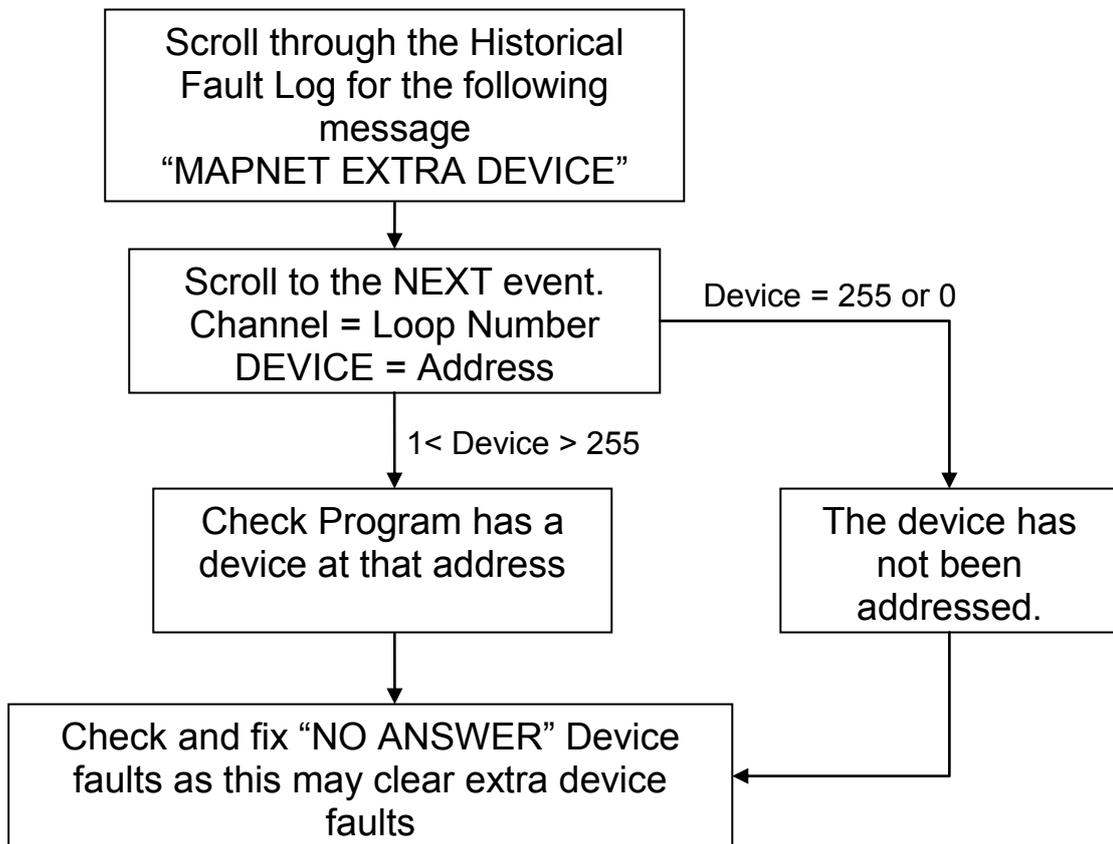

1.1.3.1.6 Output Abnormal

Description:

Observed when the output of a Relay, Sounder or Isolator base is not responding correctly.

Possible causes:

- ISOLATOR Base
- A Short circuit has occurred on the addressable loop and the Isolator Base has not been able to reset correctly

- SOUNDER or RELAY Base
- 24 Volt supply to Sounder base is not present

Suggested solutions:

- ISOLATOR Base – If short circuit fault has been corrected press 'CPU RESET' (Warm Start) to reinitialize the isolator base

- SOUNDER or RELAY Base - Check wiring and 24V fused distribution board in panel

1.1.3.1.7 Alarm Verification Tally Exceeded

NOTE: *This fault indicates a dirty detector in the field or conventional zone circuit that is programmed for Alarm Verification. Check for previous faults and note in the Log book the time and date this fault occurred.*

1. Log in at Level 4
2. Select P214
3. Force Point ON
4. Reset CPU (use button on CPU – refer to [Page 7](#)) to clear Simplex® Service Fault

1.1.3.1.8 Detector LED Operation

Off

- Detector is not communicating with the Panel
- Two Detectors on the same address
- The Head is not fitted correctly

Flash

- Detector is communicating with the panel
- Flash speed does not provide any information

On

- Detector is in ALARM or FAULT
- If no Head fitted then EXTRA DEVICE fault.
- Detector LED may become latched on if multiple faults occur to the same detector. To Reset the LED, move the Loop Card DIP Switch 1 to OFF for 10 seconds & back ON.
- If all else fails, warm boot the fire panel (CPU Reset).

1.1.3.1.9 Device DIP Switch Settings

- Devices are supplied with DIPSWITCH set to 255
- DIPSWITCHES are labeled 1 to 8 (left to right)
 - Switch 1 = 1
 - Switch 2 = 2
 - Switch 3 = 4
 - Switch 5 = 8
 - Switch 6 = 16
 - Switch 7 = 32
 - Switch 8 = 128
- Turn Switch ON to add the above number to the address. Examples:
 - Address 10 = Switch 2 & 5 ON all others OFF
 - Address 105 = Switch 1, 4, 6 & 7 ON others OFF
- The highest IDNet device address is 250.
- The highest MAPNet device address is 127.
-

1.1.3.1.10 End of Line Resistors

For a comprehensive pocket reference guide contact your local Simplex® branch

4090-9001	Supervised IAM Current Limited	6.8kΩ 4.7kΩ & 1.8kΩ
4090-9101	Monitor ZAM	3.3kΩ
4090-9118	Relay IAM with T-Sense Current Limited	6.8kΩ 4.7kΩ & 1.8kΩ
4090-9120AU	6 Pt I/O Module Current Limited	6.8kΩ 4.7kΩ & 1.8kΩ
2190-9156	Mapnet Monitor ZAM	3.3kΩ
2190-9164	Mapnet Signal ZAM	10kΩ
4100 EWIS	WIPs	10kΩ
4100 8pt Monitor Card	Conventional Zone Card	3.3kΩ
4100 6 Signal Card	Signal Card	10kΩ
4100 24-pt IO Card	Pluggable Resistors on card	2.2kΩ Input 20Ω Output

1.1.4 Address Settings for Simplex® Addressable Bases & Devices



DIP Switches 5-8

DIP Switches 1 - 4

	0000	1000	0100	1100	0010	1010	0110	1110	0001	1001	0101	1101	0011	1011	0111	1111
0000	0	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
1000	1	17	33	49	65	81	97	113	129	145	161	177	193	209	225	241
0100	2	18	34	50	66	82	98	114	130	146	162	178	194	210	226	242
1100	3	19	35	51	67	83	99	115	131	147	163	179	195	211	227	243
0010	4	20	36	52	68	84	100	116	132	148	164	180	196	212	228	244
1010	5	21	37	53	69	85	101	117	133	149	165	181	197	213	229	245
0110	6	22	38	54	70	86	102	118	134	150	166	182	198	214	230	246
1110	7	23	39	55	71	87	103	119	135	151	167	183	199	215	231	247
0001	8	24	40	56	72	88	104	120	136	152	168	184	200	216	232	248
1001	9	25	41	57	73	89	105	121	137	153	169	185	201	217	233	249
0101	10	26	42	58	74	90	106	122	138	154	170	186	202	218	234	250
1101	11	27	43	59	75	91	107	123	139	155	171	187	203	219	235	251
0011	12	28	44	60	76	92	108	124	140	156	172	188	204	220	236	252
1011	13	29	45	61	77	93	109	125	141	157	173	189	205	221	237	253
0111	14	30	46	62	78	94	110	126	142	158	174	190	206	222	238	254
1111	15	31	47	63	79	95	111	127	143	159	175	191	207	223	239	255

Detectors preset at address 255

UP = 1 (ON)

DOWN = 0 (OFF)

Note: MAPnet devices highest address is 127.

1.1.5 4100-0157A Battery Charger Faults

There are a number of Battery Charger Faults that can arise during the operational lifetime of a panel. You may observe one of the following Faults;

Charger 2% out of range
Battery Charger Supply incorrect


The most common cause is one or possibly both batteries are faulty. Before proceeding to adjust the power supply as described below, measure the voltage of each battery while it is under load. Both batteries should measure within 0.1v of the other

To correctly measure the output voltage you will need to follow the steps below.

1. To prevent damage to the system, disconnect the batteries & power down the system, disconnect the power & comms harnesses from the Power Supply.
2. Connect the Multimeter to the battery leads (with batteries disconnected), power up & measure the voltage. Calculate the difference between the measured voltage & 27.6v.


NOTE: After 90 seconds, the voltage will drop to <24v. If this happens, power down & start again.

3. Connect the Multimeter to the A or B tap on TB2. Measure the voltage. Adjust the trim-pot (refer to the Trimpot Location diagram found on Page 22) so the voltage increases (or decreases) by the difference calculated in step 1.

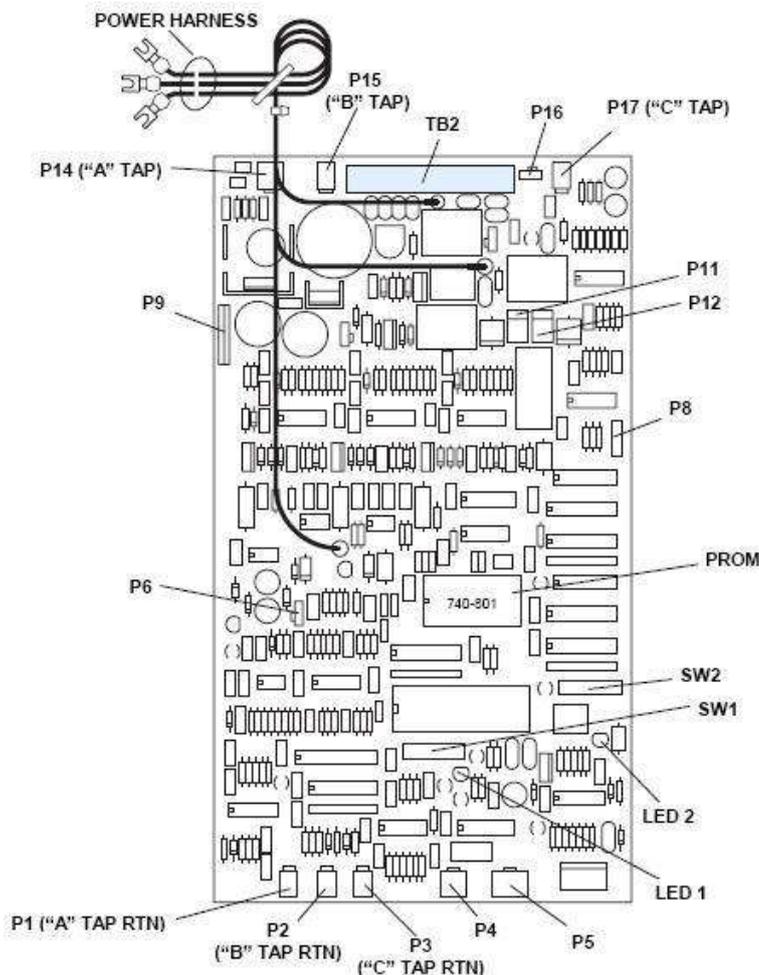


4. Measure the voltage on the battery leads. You may have to power down & up again to reset the power supply. If the voltage is correct, power down, re-connect the power & comms harnesses & return the system to normal.
5. If the voltage is not correct, repeat steps 1 & 2.

Depending on the site implementation of the Power Supply (vertical orientation shown below), it may be difficult to locate or view the Trim pot. You may be able to work on it in-situ by using a small inspection mirror. If not, it is recommended that the panel be powered down and the power supply dismantled from the panel and reconnected (and made live) on a non conductive surface as you will need to monitor the voltage across the Terminal Strip B connections.

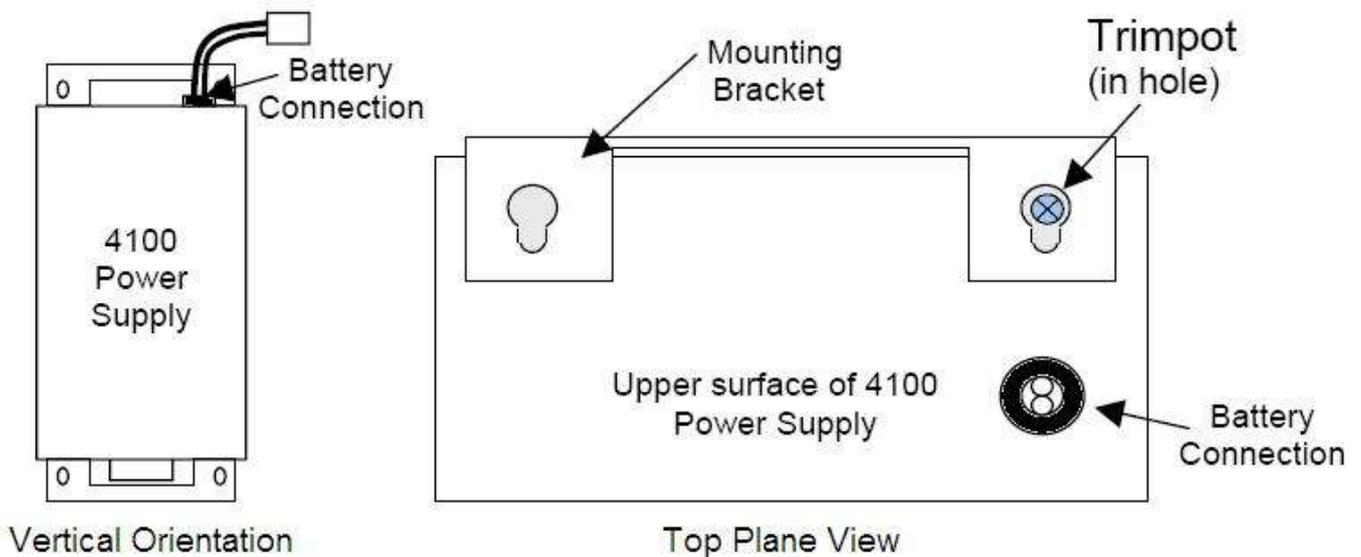

There is an older version of the Power Supply – the adjustment procedure is the same, only the trimpot location is different. This Power Supply can be identified by the IEC Socket for the mains connection on the end. An IEC Socket is the same style as found on PCs, Computer monitors etc.

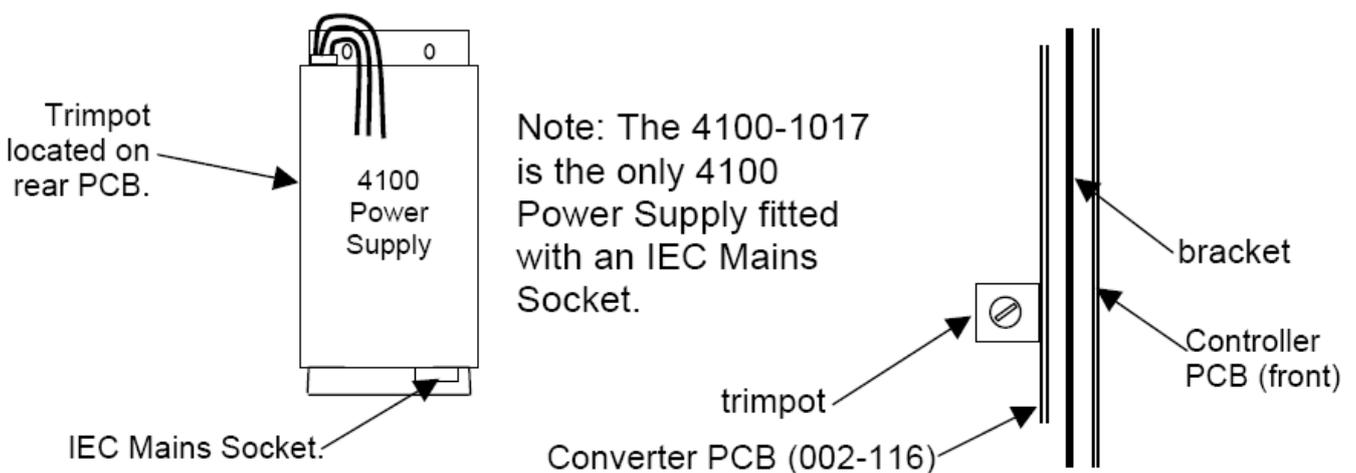

1.1.6 Positive/Negative Earth Ground Faults

Simplex 4100 Series Fire Panels have the ability to detect positive or negative Earth Ground Faults. An Earth Ground Fault occurs when an electrical circuit has a low resistance path to ground. It is imperative that Earth Ground Faults are located and repaired as multiple earth faults can disable communications meaning small or large components of the Fire Detection System may not function correctly (i.e. multiple earth faults on a Mapnet loop can disable the entire loop communications channel rendering it inoperative).

Possible Causes (Examples)

- Water Damage – creates electrical pathways
- Terminations touching metal contacts or metal structures
- Mounting screws piercing cabling
- Damaged Card in a Fire Panel
- Incorrect wiring to modules

1.1.6.1 Earth Ground Fault Detecting and Locating

There are various ways to test and locate an earth ground fault. The methods utilised can vary between the different 4100 Series Fire Panels.

Simplex 4100U – The Simplex 4100U series fire panel has the most advanced earth fault monitoring available to the Simplex Fire Panel Range. The 4100U has the ability to self diagnose and locate the general locale of an earth fault, enabling the saving of much time and effort during diagnosis. There are two main Earth Fault Detection options available for selection in the menu options (accessed via the 4100U fascia), a 'Location Search' and an 'IDNet channel Search.'

To run an Earth Fault Diagnostic, you will firstly need to login to the panel with a sufficient access level as shown below;

Access Level:	3	
Passcode:	333	(Or contact your local Simplex Branch)

This will then enable the 'Diagnostics' menu option available for selection. Choose a 'Location Search' or an 'IDNet channel Search' and the panel will begin automatically searching different circuits trying to locate the fault. Once the diagnostic has completed its search, you should then have a finite area to focus your repairs. The IDNet channel search can even tell you which section of the loop (i.e. between which isolators) the fault is located.

NOTE – It is possible for Earth Ground Faults to switch from Positive to Negative Earth Ground Faults (or Vice-Versa), so when disconnecting circuits it is highly recommended that you remove BOTH the positive and negative connections for efficient diagnosis.

If you find that all the bays have been checked, and the earth fault appears to be in the main CPU Bay, the Earth fault will most likely be in either the integrated IDNet Loop card found on the power supply, OR more likely, on the Auxiliary fuse distribution card. The loop card can be tested as per any other loop card. The Auxiliary fuse card should be unmounted (remove 4 screws) & insulate the Fuse Card from the mounting studs with paper or cloth. If the Earth fault disappears, then the fault lies in the fuse card, otherwise you will need to individually disconnect each of the 24V power supplies from the Fuse Distribution Board in turn, narrowing the circuit with the Earth Fault. If the Earth Fault still remains, the fault is in the PSU

For more information on the specifics of 4100U Earth Fault Diagnostics, please refer to the 4100U Installation Manual (LT0350) that was supplied with the panel.

PLEASE NOTE – Intermittent Earth Faults can only be diagnosed whilst the fault is active.

Pre-4100U Series Fire Panels (4100+, 4100A) – The older Simplex 4100 Series Fire panels have the ability to detect Positive/Negative Earth Ground Faults. Unlike the 4100U Series Fire panels, their Power Supplies do not have the option to automatically diagnose on which circuit the fault is located. There are, however, methods which can narrow down the circuits in question.

To begin, when the Earth fault is currently active on the fire panel:

- Disconnect the power & comms to the different bays – power down the panel first (sequentially, and one at a time) until the Earth Fault clears from the system
- After locating which bay of cards holds the problem, you will need to disconnect individual cards using the same methodology.
- Once the card in question is located, you will need to test the circuits but keep in mind the fault may be with the card, but is more likely is out in the field.
- The motherboard that the card plugs into can be the source of the Earth Fault – the protection devices on the motherboard can fail after repeated discharges through them.
- When the earth fault is located on a Mapnet or IDNet loop, disconnect one end of the loop from the Loop card (both + and - terminals), and break the loop in different areas (i.e. line isolators for example) until the Earth Fault disappears.

NOTE – It is possible for Earth Ground Faults to switch from Positive to Negative Earth Ground Faults (or Vice-Versa), so when disconnecting circuits it is highly recommended that you remove BOTH the positive and negative connections for efficient diagnosis.

If you find that all the bays have been checked, and the earth fault appears to be in the main CPU Bay, the Earth fault will most likely be on the Auxiliary Fuse Distribution Board. The Auxiliary fuse card should be unmounted (remove 4 screws) & insulate the Fuse Card from the mounting studs with paper or cloth. If the Earth fault disappears, then the fault lies in the fuse card, otherwise you will need to individually disconnect each of the 24V power supplies from the Fuse Distribution Board in turn, narrowing the circuit with the Earth Fault. If the Earth Fault still remains, the fault is in the PSU

PLEASE NOTE – Intermittent Earth Faults can only be diagnosed whilst the fault is active.

2.0 4100 Crash Codes – General Information



2.1 4100 Crash Codes – General Information

The 4100 family associated with the crash codes in this section are listed below;

- 4100 Classic
- 4100+
- 4100A
- 4100U

Crash codes can be defined by a class designation as listed below;

CLASS E Crash: Indicates a possible defect in system hardware or incompatible firmware revisions.

CLASS S Crash: Indicates a possible error/bug in executive software. Check the system revision (via MENU > Software Revision Level) and contact your local Simplex® branch.

CLASS P Crash: Indicates a possible problem in the job software programming. Incompatible job hardware and software can be corrected by reprogramming of the job information. This can occur during installation of new software on a network (Crash Code 78). If it persists, contact your local Simplex® branch.

2.2 4100-Family General Crash Codes Table

Crash Code	LCD Display	Error	Information
00	CRASH_UNEXPECTED <CRASH UNEXPECTED> CLASS S CRASH	Unexpected crash due to possible bug in executive software (System PROM)	- Call Headquarters Technical Support at once!
14	CRASH_INTERNAL_RAM_BAD <INTERNAL RAM ERROR> CLASS S CRASH	Internal RAM error	-
15	CRASH_EXTERNAL_RAM_BAD <EXTERNAL RAM ERROR> CLASS S CRASH	External RAM bad	-
30	CRASH_BAD_RAM <Bad or missing RAM chip> CLASS E CRASH	- Bad System RAM Chip	- RAM chip defective, improperly inserted, or missing - Not enough memory for Job or bad RAM chip - CFG chip is blank
31	CRASH_BAD_CODE <CODE Checksum Error> CLASS E CRASH	Code checksum error System PROM is defective, NOT programmed or inserted improperly	- Will occur with Rev 4.02 and earlier when used with 8096BH microprocessor change indicator 'E.' Check 9 th character of FPO number on U9. If 'E' then Rev 4.03, or higher system executive is required. Also see FSB-386R - The CFG format (Panel Programmer) used is incompatible with the panel EXEC installed
32	CRASH_BAD_CONST <K_SEG checksum error> CLASS E CRASH K_SEG CHECKSUM ERROR	Code checksum error	- System PROM U34 is defective, NOT programmed, NOT properly inserted, or missing. - Error 32 can be caused by a defective, un-programmed or improperly inserted flash chip
33	CRASH_BAD_CFG <CFG checksum error> CLASS E CRASH	CFG checksum error – CFG PROM is defective, not programmed, or inserted improperly	- Can be caused by CFG RAM selected by dipswitch SW1-2, but CFG RAM is not installed in the U45 socket - There has been a large number of AMD AM28F010 and AM28F020 Flash chip failures
34	CRASH_CFG_FMT <Invalid CFG Format> CLASS E CRASH	Invalid CFG format	Indicates that the CFG format number is incompatible with the version of executive software (System PROM). Check programmer disk Rev number against Rev number on the label of the System PROM. Update System PROM to Rev of current software by burning a new system executive PROM

2.3 4100-Family General Crash Codes Table (continued)


Crash Code	LCD Display	Error	Information
39	CRASH_SMPL_CODE_OPCODE <Invalid CODE Operation> CLASS P CRASH	Invalid operation code exists in program	Invalid operation code exists in program
62	CRASH_RAM_OVERLAP <Overlapping CFG RAM> CLASS E CRASH	Overlapping CFG RAM	This indicates that the system RAM and the CFG RAM addresses overlap. This can be caused by an improper version of the GEN_INFO.DAT file being on the CC/Build and/or Runtime Disk.
66	CRASH_MSGLIB_FMT <MSGLIB Format Error> CLASS E CRASH	MSGLIB Format error	- Message library format number is incorrect for system software revision - Wrong MSGLIB on programmer disk. Use same programmer version to burn upper and lower EXEC chips
67	CRASH_SMALL_RAM <System RAM chip too small> CLASS E CRASH	System RAM chip is too small	- The amount of RAM installed in the Master Controller is too small for the job configuration. Replace the 256K RAM with 1MEG RAM chip on 4100 and 4020, or add an additional RAM Bank on 4100+ and UT. - The panel did not have a RAM chip installed into U35. Remove the chip that had been placed into the CFG RAM socket U45 and install in the system RAM socket U35
73	CRASH_INVALID_MSGLIB_NUMBER <INVALID Msglib Number> CLASS S CRASH	INVALID Message Library Number	INVALID Message Library Number

3.0 Identifying Faults on the GCC, IMS & TrueSite Graphics & Network



3.1 Identifying Faults on the Graphics – General Instructions

The GCC, IMS & TrueSite are all different generations of PC based graphics stations. GCC was for Windows 9.x, IMS for Win2000 & XP, TrueSite is for XP & Vista. All are similar in appearance, functionality & features – the newer versions have extra features

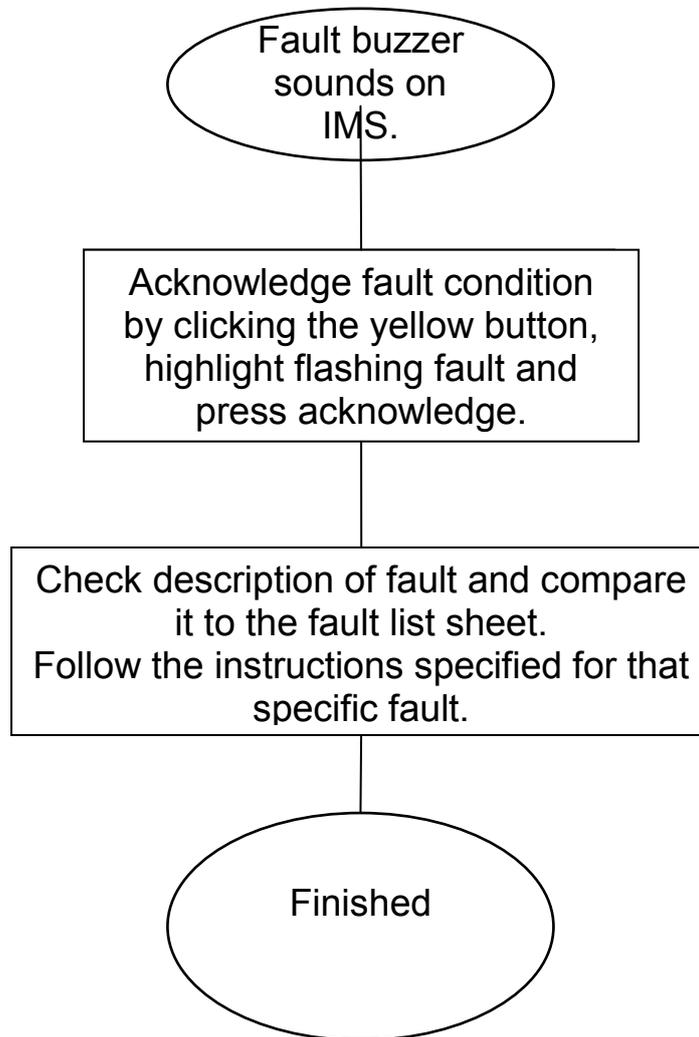


3.1.1 GCC, IMS & TrueSite Workstation Graphical Control Centre

All current faults on a network can be viewed from the Graphical Control Centre (setup is site specific). It is possible to access a panel directly from the Graphical Control Centre using the Set Host function on a GCC or IMS System or by opening a session in Terminal Mode on the Network tab on a TrueSite Workstation.

For assistance on utilising these features please refer to the corresponding User Manual that is supplied with each system.

3.2 Displayed Fault Format


The faults will appear in the below format,

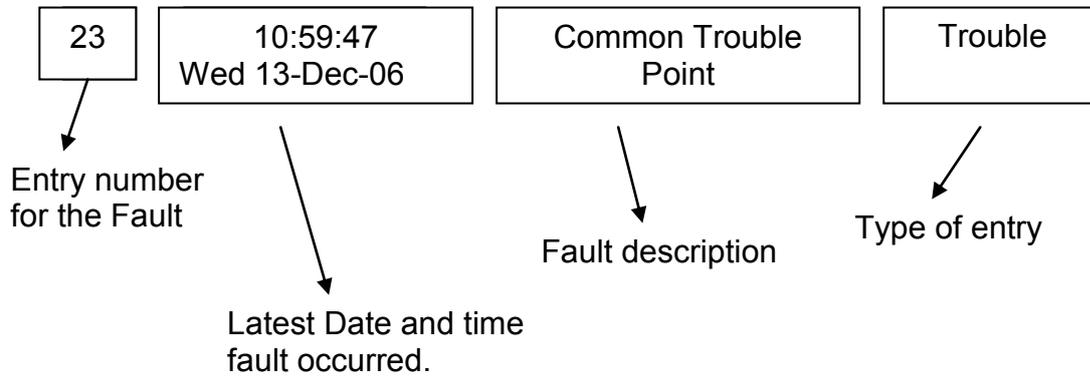

When an active fault is displayed on the LCD more information about the location of a network fault can be determined by pressing either the 'MORE INFO' key (4100U) or 'FUNCTION' (earlier 4100 series panels).

On an IMS System, view network information with a 'double-click' on the current fault to bring up a more detailed information window.

Example:

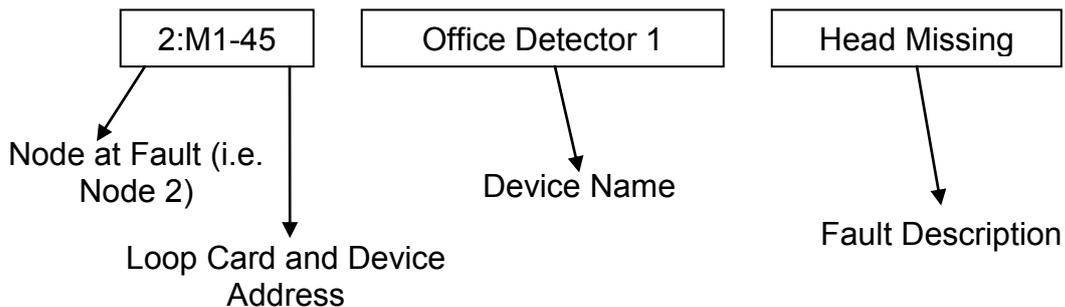


Card faults can be viewed in the same manner, whereby the node at fault can be viewed in the same way (as above).

On an IMS (graphics terminal) identifying which node number corresponds to which panel is achieved by accessing 'Set Host' and then clicking on 'About Node.'

To view similar information via the 4100 display, click on 'MENU' followed by 'Display Network Node Identification' via the main keypad.

3.2.1 Fault Type

Fault	Description of most likely cause	
Head missing	Detector Head has been removed from base	Pg 14
Output Abnormal	Detector output e.g. sounder is faulty	Pg 18
Bad Answer (Static)	Detector head or base is faulty	Pg 16
Bad Answer (Intermittent)	Two detectors reporting at the same address	Pg 16
No Answer	Detector / device missing (Complete head/base)	Pg 13
Open Circuit	Monitored circuit broken	Pg 10
Short Circuit	Monitored circuit or 24 volt supply shorted	Pg 11
Node Missing	Communication lost with specified panel	
Degraded Style 7	The specified network loop is broken	
Earth Fault	The specified panel has an earth fault	
Battery Fault	The specified panel has a battery fault	
Card Fault	Specified panel has a card in fault	
Pseudo status fault	Specified panel needs to be checked	
Miscellaneous fault	Specified panel has a fault not include above	

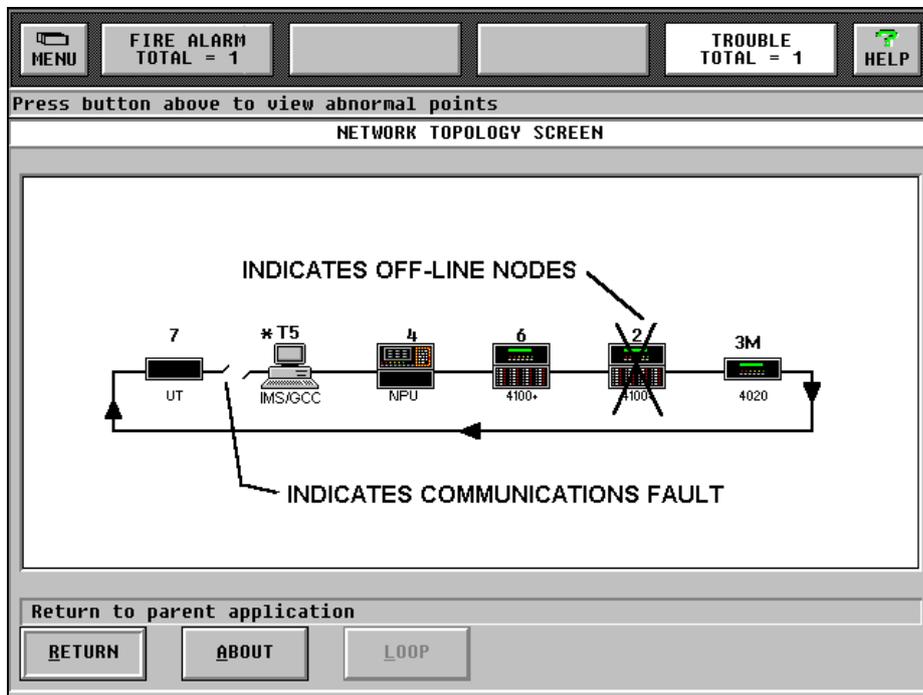

*Network Diagnostcs showing Topology.
By clicking on each Icon, the panel details will be displayed*

3.3 Network Faults

3.3.1 Common Trouble Point for Node

A fault has occurred within a device, or card (etc) that is flagging the Common Trouble Point for that Node around the network. Only by accessing the Node encompassing the fault (or Graphics Control Centre), will more specific fault information be available.

3.3.2 Card Trouble for Node

This fault indicates that there are one or more faults associated with a card in the listed Network Node. For further diagnosis of the fault, you will need to access the Node encompassing the fault.

3.3.3 Network Operating in Degraded Style 7

Style 7 networks are a continuous ring topology. If the network ring has a break or incorrectly terminated cable pair, then the network cards see this as an open circuit and will display a 'Degraded Style-7' fault

3.3.4 Network Initialization Incomplete

During the network boot-up sequence, there are panel/s that have not successfully initialized. May require a full network reboot (global warm restart which can be done remotely on some networked systems by access the MFIP)

3.3.5 Node Missing/Failed

The node from which you are viewing the fault cannot communicate successfully to the node/s listed

3.3.6 System Pseudo Status for Node

This fault is similar to the Common Trouble Point for Node as there is a System Pseudo (or virtual point) that is in an abnormal state on the listed Node. Accessing the Node encompassing the fault may provide more specific information.

3.3.7 Version Mismatch

The configurations do not match between at least two nodes. This is due to different revisions of software in the panels & is caused by not programming & downloading to the network correctly. Please Contact your local Simplex Fire Service Provider for Assistance

4.0 Identifying F3200 Faults




4.1 Recall System Faults

4.1.1 Function

The Recall System Faults function allows viewing on the LCD the current causes of a "SYSTEM FAULT" indication. It also displays the status of any RZDU (Remote Zone Display Unit) that has an off-normal condition, including those which do not cause System Fault

4.1.2 Operating Sequence

For both networked and non-networked systems, from the base display, press:

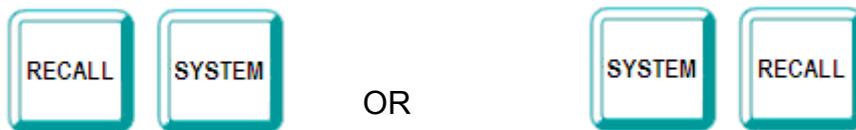

If there are no system faults, a brief message is displayed saying so, and the LCD reverts to the base display.

If a system fault exists, the LCD will display it. To view the next fault, press:

To view the previous fault, press:



4.2 List of System Faults – Non-Networked

The complete list of faults which can be displayed by a system fault recall is as follows:

1. **Mains fail**
When mains fail appears in a system fault recall it indicates that mains is currently failed. When mains have failed continuously for 8 hours a system fault may be generated depending on programming.
2. **EEPROM database checksum error**
The panel is in-operational if this fault is present.
3. **EEPROM database version error**
This fault condition means that the EEPROM database checksum is correct but the database is an old version with a format which cannot be used. All circuit processing is disabled when this fault is present and the panel is in-operational.
4. **Module configuration mismatch**
This fault occurs when the number of Zone or Relay Modules installed does not match the programmed number of modules required to be present. The bottom line states processing is enabled or disabled. On detection of a module mismatch processing is disabled and the panel is not operational. A technician can temporarily assign a new configuration so that processing can be re-enabled and use only those modules that are present. This System fault will remain until the correct number of modules is installed and verified as operating correctly.
5. **Keypad disconnected**
Processing of circuit inputs and alarms continues.
6. **LED display board fault**
There is a fault with a zone or relay LED display board. This can occur if the wrong number of display boards is installed.
7. **LCD display fault**
A fault has occurred with the 80 character LCD. This can occur at startup or during an LCD test.
8. **EPROM CRC error**
A checksum calculation of EPROM memory has failed. This can occur during System and Auto Test.
9. **RAM write read fault**
A write read test of main RAM has failed. This can occur during System and Auto Test.
10. **Charger high/low/normal Raw value = high/low/normal**
This message indicates the battery charger voltage is high or low. When this fault is viewed in the system fault recall, the display will show the current state of the charger as high, low, or normal, which may be useful for adjusting the charger potentiometer. A charger low condition will not produce a system fault until 30 minutes after any battery test, but will still appear in a system fault recall during this time. During a battery test a charger low condition (for the raw value) will be displayed in a system fault recall as the charger is inhibited, but this is not a system fault.
11. **Fuse blown**
Check for a blown fuse, and replace with a fuse of the *same* amperage rating
12. **Clock chip RAM fault**
Clock chip RAM is used to store all the isolate data (zone and relay isolate status, etc) plus temporary "board present" assignments. The isolate data and board present data is read from clock chip RAM at startup and this fault means the clock chip RAM has not saved the data correctly and will probably not

be read correctly at startup. Try isolating and de-isolating something (e.g. bells) to get the controller to retry writing/reading this RAM.

13. EEPROM write fail

This fault will occur if a failure occurs when writing to EEPROM database memory during program mode.

14. All MAF zones isolated

This fault will occur if all zones (mapped to MAF) are isolated. This can be inhibited with an option in programming, but doing so contravenes AS1603.4.

15. Supply failed

This fault means that both mains have failed and the battery voltage has fallen to 21 volts or below. The standby relay is de-energised and all processing of circuit inputs stops.

16. Output logic exec error nn

An error has occurred with output logic execution. The error number nn has the following meaning:

NOTE:

The software produces the following error messages from a series of built-in checks which are performed during the operating of the FIP outputs. It is highly unlikely that such errors will occur. If one does, the operator should inform the service company and have them check it.

- “No equations have been found but some were expected”. This indicates a conflict in the information stored in the EEPROM database.
- Invalid Opcode - An invalid token has been encountered in an equation.
- Range error - This occurs when an out of range value is found such as a timer number greater than 64 or an ancillary relay number greater than 3.
- Stack error - The execution stack in the RAM has overflowed or underflowed.
- Link error - An invalid value has been found in a link field in an equation.
- Invalid MAF output - This indicates a conflict in information stored in the EEPROM database. An equation has been found to control an ancillary or MAF relay but was not expected.
- NA (New Alarm) function RAM limit exceeded - This indicates too many NA functions have been used in the programming of Output Logic functions.
- Netvar SID not present - This error occurs if a network variable in the output logic specifies a SID which is not present in the SID list of this panel. Every SID for which Netvars are to be accessed must be entered into the SID list of this panel.
- Zone command range error - An equation to isolate/de-isolate or reset a zone or range of zones had an invalid zone number.

17. System/Auto Test circuit test fail

A circuit test failed during system or Auto Test or an unexpected fault or alarm occurred during the test. The Brigade fault relay is turned on when this fault is present. The fault will be cleared by a successful system or Auto Test. Isolating the faulty circuit & performing a system test should allow the test to pass & clear the fault.

18. Shift register bus fault

This error indicates a fault with the bus connecting the Controller with the MAF/PSU, zone modules and relay modules. It may be caused by a break or short in the flat ribbon cable (e.g. bd unplugged), by temporary noise, or by a circuit board fault.

NOTE:

When this fault occurs all processing of inputs stops until the fault clears. If the fault does clear, processing of inputs resumes automatically.

19. **RZDU x**
This displays the current status of any RZDU which has an off-normal condition.
20. **Net msg discard**
This occurs only with network systems. The local system discarded a message that was repeatedly sent to another device on the network that did not acknowledge it. To allow other messages to be sent on the network, the unacknowledged msg was discarded. This should occur only in cases of extreme network loading, if the system addressed does not exist or is off line, or if network cables are broken.
21. **Net port hw fault**
This indicates a hardware fault with the serial port interfacing to the network. Call the service company.
22. **Clock crystal Timebase check fail**
This error message occurs only at startup and indicates the frequency of the clock chip on the Controller is out of tolerance to the microprocessor. The Controller will restart and try the test again.
23. **Clock register write read fail**
A test of the Controller time/date clock registers has failed. The Controller will restart and try the test again.
24. **Clock chip RAM write read fail**
A test of the Controller's clock RAM has failed. The Controller will re-start and try the test again.
25. **Shift reg clocking fault**
This is the same fault as "Shift register bus fault" above. However, this fault occurs only at startup or on exit from programming mode when the panel is trying to determine what modules are present.
26. **Battery is low**
This message indicates the battery voltage is low. When PSU faults are inhibited for 24 hours, this message will still appear in a system fault recall if the voltage is low even though it is not creating a system fault.
27. **Battery connection fail**
This message indicates the battery is not connected, but may occur with the battery connected if the battery is faulty or has a low charge. When PSU faults are inhibited for 24 hours, this message will still appear in a system fault recall if the battery appears to be not connected even though it is not creating a system fault.
28. **Battery capacity low**
This message indicates an automatic battery test failed, i.e. the battery has a low charge.

4.3 Glossary of Abbreviations

A/C :	Air Conditioning
ac :	Alternating Current
AEOL :	Active End of Line
AHr :	Ampere Hour
ANC 1 :	Ancillary Relay 1
ASE :	Alarm Signaling Equipment
AZC :	Alarm Zone Circuit, or Detection Zone
AZF :	Alarm Zone Facility, or Group (AS1603.4 terminology)
AVF :	Alarm Verification Facility, or Check Alarm
Bd :	Board
CIE :	Control & Indicating Equipment
Char :	Character
Cct :	Circuit
COM :	COMMON relay contact
dc :	Direct current
EB :	External Bell
EEPROM :	Electrically Erasable Programmable Read Only Memory
ELV :	Extra Low Voltage
EOL :	End Of Line (device)
EOLR :	End of Line Resistor
Expn :	Expansion
E2 :	Electrically Erasable Programmable Read Only Memory
FF :	Firefighter Facility (part of Display/Keyboard)
FIP :	Fire Indicator Panel
FRC :	Flat Ribbon Cable
I/O :	Input/Output
LCD :	Liquid Crystal Display
LED :	Light Emitting Diode
MAF :	Master Alarm Facility
Max :	Maximum
Min :	Minimum
MCP :	Manual Call Point (Break Glass Switch)
MOV :	Metal Oxide Varistor (Used for electrical Surge Protection)
msec :	Millisecond
NC :	Normally Closed
NDU :	Network Display Unit
NO :	Normally Open
No :	Number
Nom :	Nominal
PC :	Personal Computer (small computer)
PCB :	Printed Circuit Board
PSU :	Power Supply Unit
PTC :	Positive Temperature Co-efficient (Thermistor)
R1 :	Module Relay Number 1 (program abbreviation)
RL1 :	Module Relay Number 1 (text abbreviation)
RAD :	Return Air Duct (Air Conditioning Plant)
RDU :	Remote Display Unit
RMS :	Root Mean Square
Reqd :	Required
RTC :	Real Time Clock
SAD :	Supply Air Duct (Air Conditioning Plant)
SID :	System Identification Number (Network device)
sq mm :	square millimeter

T1 : Programmable Timer Number 1 (program abbreviation)
Tmnl : Terminal
V1 : Programmable Variable Number 1
VA : Volts Amperes
VB : Battery Backed Voltage
VNB : Non Battery Backed Voltage
+VBF : Fused Battery-Backed Voltage
+VNBF : Fused Non-Battery-Backed Voltage
WS : Warning System
Z1 : Zone Number 1 (program abbreviation)
Zn1 : Zone Number 1 (text abbreviation)
8RM : 8 Relay Module
8ZM : 8 Zone Module

5.0 Identifying faults on a QE90



5.1 QE90 Service Isolation Mode – Fault Display


To access the fault memory and communications errors facility of a QE90 panel follow these steps;

1. Put the panel into 'Isolate' [i.e. move key-switch to Isolate position]
2. Press and hold the BGM/PAGING key for 2 seconds until PROGRAM LED (only) is on.
3. Press BGM/PAGING key successfully until LAMP TEST is flashing
 - The Fault memory will be displayed
 - ALERT LEDs will display the binary equivalent of the COMMS ERROR COUNT:

Zone 3	=	1	
Zone 4	=	2	
Zone 5	=	4	etc

When the LAMP TEST button is flashing refer to the following pages for some descriptions of the faults indications displayed

5.2 ECP versions 2.xx/4.xx/6.xx – System Fault Display

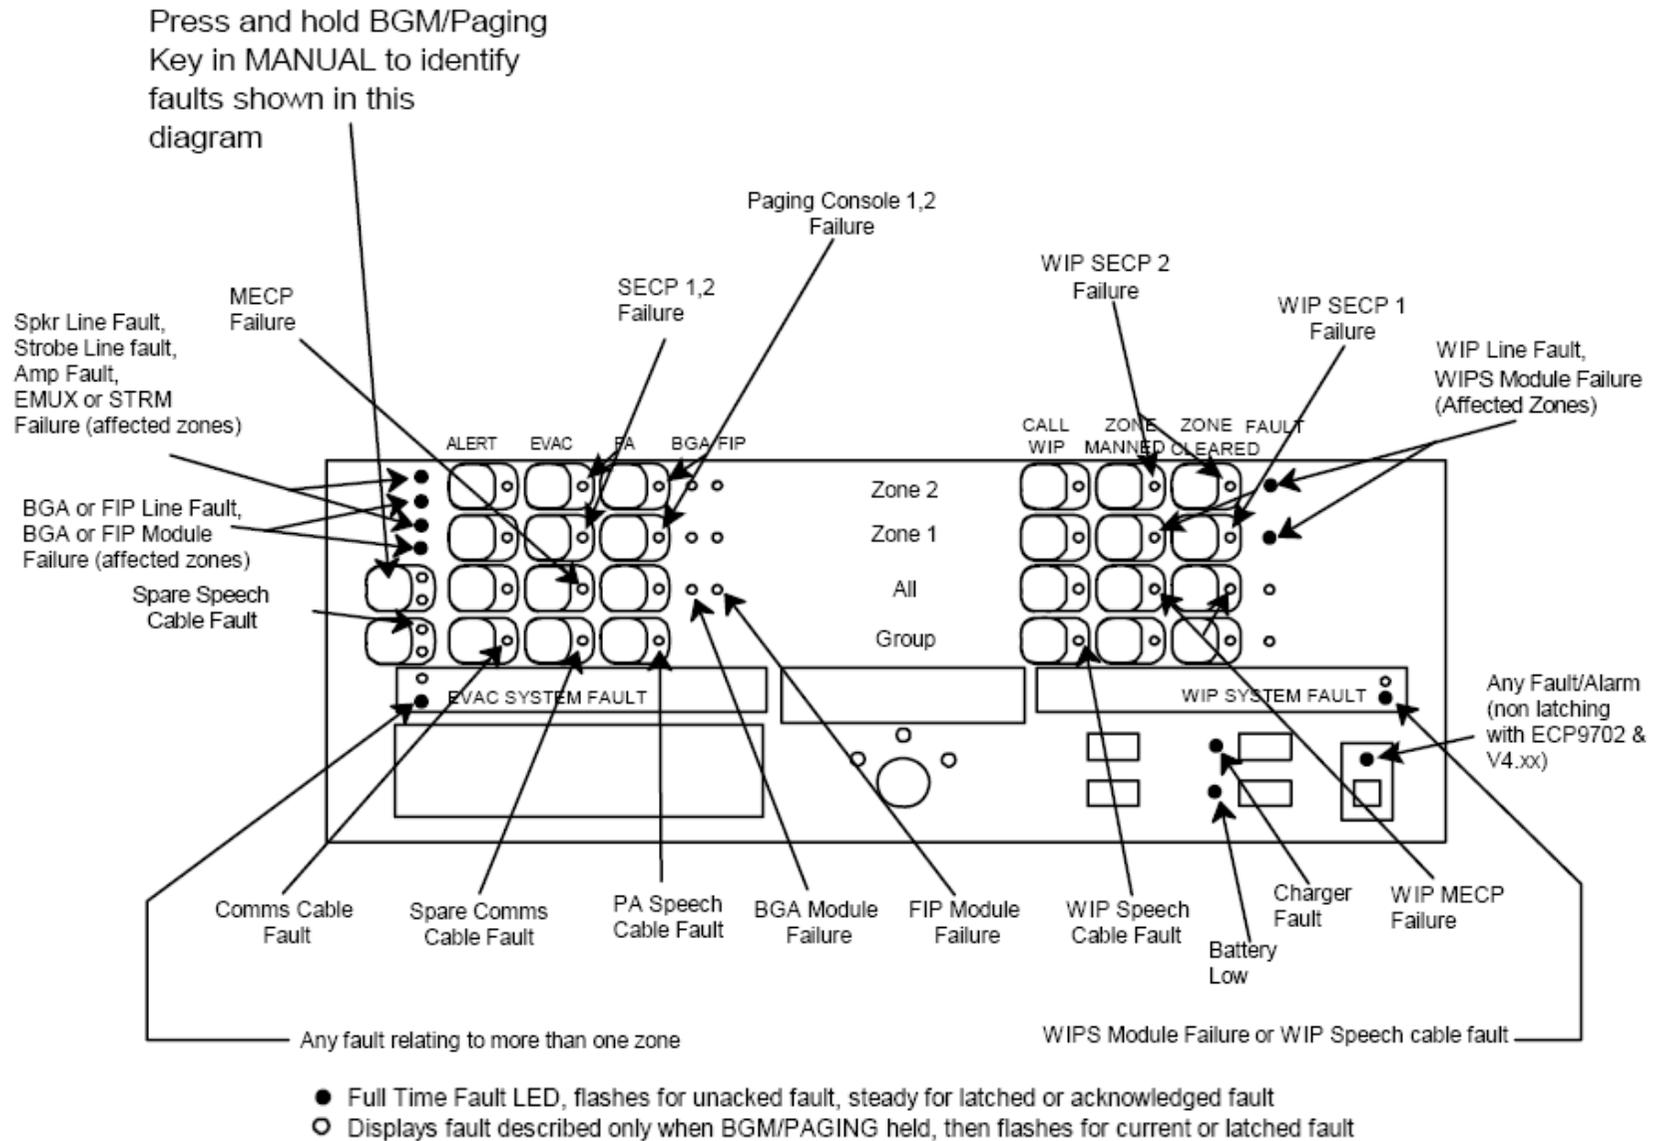

5.3 Audio Line Fault

5.3.1 Speaker Line Fault/Amp Fault

- Check EOL resistor (56k)
- If ok, swap speaker lines to a different Zone (on amp)

Test to see if the fault has followed

- IF YES – the fault could be in the field (wiring, devices)
- IF NO – the fault is likely to be in the transformers/amplifiers

NOTE: *A good way to test where a fault is located within the panel is swapping identical components over and testing to see if the fault follows the device. This allows you to eliminate if the fault is located on a device/card within the panel or out in the field wiring/devices.*

5.3.2 Amplifier LED Configurations

EAMP9001 LEDs			
Led	Colour	Position	Indication when ON
D5	Red	Top	Power Available for amplifiers 1 and 2
D6	Red	Bottom	Power Available for amplifiers 3 and 4

HAMP9308 LEDs			
Led	Colour	Position	Indication when ON
LD1	Green	Top	Power Available for amplifier 1
LD2	Red	Top	Amplifier 1 switched off due to overload
LD3	Red	Bottom	Amplifier 2 switched off due to overload
LD4	Green	Bottom	Power Available for amplifier 2

AMP200 LEDs			
Led	Colour	Position	Indication when ON
LD1	Green	Top	Power Available
LD2	Red	Top	Amplifier switched off due to overload

The red LEDs on the HAMP9308 and AMP 200 indicate that the speaker load is greater than the amplifier's rating, or the output is short circuited, and the amplifier has briefly switched off to prevent damage. Both LEDs of the HAMP9308 will operate in unison in 1 * 100W mode and the LEDs on both amplifier modules will operate in unison on the AMP200.

5.3.3 Speaker Tapping Adjustments

Both amplifier types have controls to adjust the power output.

NOTE: *However in terms of efficiency and battery capacity that it is preferable to reduce the volume by adjusting the speaker taps to a lower setting and leaving the controls turned right up (fully clockwise), rather than by using the volume controls. Listed below are the Card Tap configurations.*

EAMP9002 Controls			
Control	Location	Amps affected 4 * 10W	Amps affected 2 * 25W
VR1	Top	1	1 & 2
VR2	Second Top	2	
VR3	Second Bottom	3	3 & 4
VR4	Bottom	4	

HAMP9308 Controls			
Control	Location	Amps affected 2 * 50W	Amps affected 1 * 100W
VR1	Top	1	1
VR2	Bottom	2	

AMP200 Control		
Control	Location	Amps affected
VR1	Top of Master	1

5.4 Strobe Line Fault

- Check EOL resistor (56k)
- If ok, swap speaker lines to a different Zone (on amp)

Test to see if the fault has followed

- IF YES – the fault could be in the field (wiring, devices)
- IF NO – the fault is likely to be in the transformers/amplifiers

NOTE: *A good way to test where a fault is located within the panel is swapping identical components over and testing to see if the fault follows the device. This allows you to eliminate if the fault is located on a device/card within the panel or out in the field wiring/devices.*

LED	Colour	Normal State	Indication when ON
LD1	Green	ON	Microprocessor running when on steady
LD2	Yellow	Flicking	Responding to Comms when flicking on
LD3	Green	ON	+5V supply OK
LD4	Red	OFF	Flashing – current line fault Steady – latched line fault


If a fault was present but all strobe outputs are now normal, the Red LED will be steady. This feature is designed to assist in determining if an "Audio fault" indication on the ECP is/was an amplifier fault/speaker line fault or a strobe line fault. To extinguish the steady red LED, switch the ECP to Isolate and back to Manual or Auto (all software versions) or press and hold SILENCE for 2 seconds (ECP Version 2.0 and later).

5.4.1 Strobe Output Considerations

Having eliminated the strobe card as the Audio Line Fault there are some other considerations to keep in mind.

Strobe lights must be wired to the A and B terminals as shown in the diagram below (Strobe Relay Driver Module and Strobe Light Connection).

The 2k7 resistor connected to each terminal pair when the system is shipped must be removed and connected to the end of the strobe line. Keep in mind that the maximum load on each output is 2Amps. Loads higher than this can blow fuses

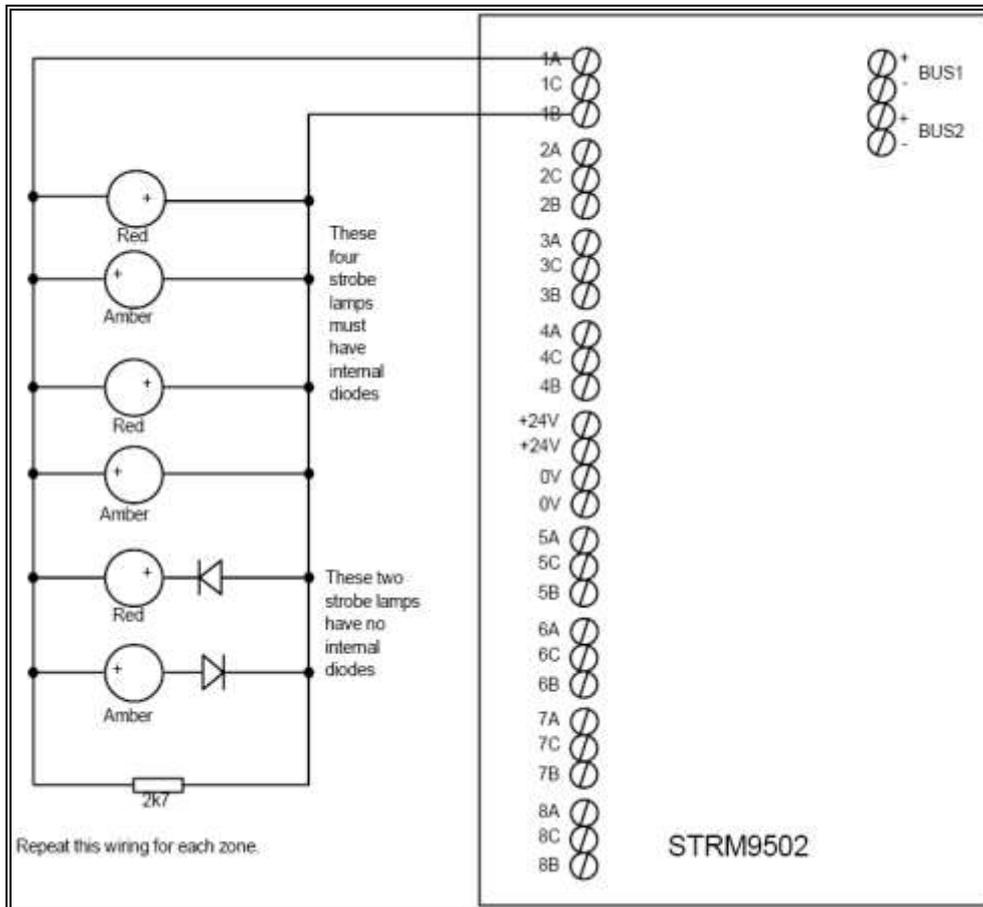

Strobe Relay Driver Module and Strobe Light Connection

5.4.2 Cable Sizing

It is inadvisable to use a wire gauge appreciably heavier than the gauges in the table (below) – there may be problems with high inrush currents (which are required to charge the large electrolytic capacitors in some strobe lights) which can weld the relay contacts. It is also recommended that you don't use cables *shorter* than 100m, or if you do then add resistor(s) to make enough total resistance to give about a 10% voltage drop at the intended load current.

It is recommended that cables are no longer than 1000m.

NOTE: *The above paragraph does not apply if all strobes connected to a cable pair are Multi-Candela strobes – as they do not suffer from the inrush current problem.*

Cable Length	100mA Load	250mA Load	500mA Load	1A Load	2A Load
100m	0.75 mm ²	0.75 mm ²	1.5 mm ²	2.5 mm ²	6 mm ²
200m	0.75 mm ²	1.5 mm ²	2.5 mm ²	4 mm ²	10 mm ²
300m	1 mm ²	2.5 mm ²	4 mm ²	6 mm ²	16 mm ²
500m	1.5 mm ²	4 mm ²	6 mm ²	10 mm ²	25 mm ²
700m	2.5 mm ²	4 mm ²	6 mm ²	16 mm ²	25 mm ²
1000m	2.5 mm ²	6 mm ²	10 mm ²	25 mm ²	40 mm ²

Table 1: Cable Gauges

5.4.3 Links and DIP Switches

Each STBM9008 module contains a DIP switch that must be set to the correct address to define the function of the module. Switches SW5-8 set the function of the module and must be set as indicated (a more detailed description of settings included in *Table 4*). Switches SW1-4 determine the address, 0 - 15, of the module and thus the output line numbers (as seen in *Table 3*). The mapping of the evacuation zones to the strobe output line numbers is controlled by the software in the ECP module.

The Link settings for each output are shown in the table, below.

Strobe Output or GP output Pair	Links installed if strobe output	Links if GP output pair
1	1,9,17=2-3	1 removed, 9 removed, 17=1-2
2	2,10,18=2-3	2 removed, 10 removed, 18=1-2
3	3,11,19=2-3	3 removed, 11 removed, 19=1-2
4	4,12,20=2-3	4 removed, 12 removed, 20=1-2
5	5,13,21=2-3	5 removed, 13 removed, 21=1-2
6	6,14,22=2-3	6 removed, 14 removed, 22=1-2
7	7,15,23=2-3	7 removed, 15 removed, 23=1-2
8	8,16,24=2-3	8 removed, 16 removed, 24=1-2

Table 2: Link Settings and their corresponding Outputs

Strobe Module address	Switch 4	Switch 3	Switch 2	Switch 1
0	OFF	OFF	OFF	OFF
1	OFF	OFF	OFF	ON
2	OFF	OFF	ON	OFF
3	OFF	OFF	ON	ON
4	OFF	ON	OFF	OFF
5	OFF	ON	OFF	ON
6	OFF	ON	ON	OFF
7	OFF	ON	ON	ON
8	ON	OFF	OFF	OFF
9	ON	OFF	OFF	ON
10	ON	OFF	ON	OFF
11	ON	OFF	ON	ON
12	ON	ON	OFF	OFF
13	ON	ON	OFF	ON
14	ON	ON	ON	OFF
15	ON	ON	ON	ON

Table 3: DIP Switches 1 – 4 – Select Card Address

DIP Switch				Output Pattern	Usage	Minimum STRM Software Version
5	6	7	8			
OFF	ON	ON	OFF	Dual polarity, steady voltage for both evacuate and alert signals.	Standard self-flashing strobes.	1.00
OFF	ON	ON	ON	Dual polarity, ISO 8201 T3 pattern for evacuate signal, steady voltage for alert signal.	Multi-Candela strobes for evacuate, standard self-flashing strobes for alert.	1.70
ON	ON	ON	ON	Dual Polarity, continuous flash (not T3) for both evacuate and alert signals. 450mS on, 450 ms off.	Incandescent or LED lights for both evacuate and alert.	1.49
Other Combinations				Do not use		

Table 4: DIP Switches 5 – 8 – Select MODE for Powered Outputs

NOTES: Voltage-free General Purpose relay contacts are unaffected by these DIP switches.

Strobe Module outputs (Non-GP) use terminal C as REFERENCE.

'A' terminals are +ve (active positive signal) for ALERT.

'B' terminals are +ve (active positive signal) for EVACUATE.

5.4.4 STBM9008 Board Installation

To install the STBM9008 Module, perform the following steps:

STEP 1: Install the STBM9008 board into the DIN rail housing and install the unit on the DIN rail.

STEP 2: Isolate power to the SYSTEM by Switching OFF ALL the DC circuit breakers on the power supply unit.

STEP 3: Install all the cable connections to the STBM9008 module and ensure that the DIP switch has been set to the correct settings.

STEP 4: Switch on the DC circuit breakers and check that the system functions correctly.

5.5 BGA or FIP Fault

A 10V Zener Diode type BZT03-C10 (Normally open input type only) is required as Input End-of-Line. The Zener diode is required to maintain Line Monitoring. The diode must be connected with the cathode (i.e. the end marked with a band) to the positive input (Please see 'Termination Points and Example Wiring' figure shown below).


Inputs that are programmed as General Purpose (GP) inputs do not need the zener diode end of line.

Cables should have a wire gauge of at least 0.75mm² and should not be longer than 1000m.

	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	ZONES 1 WIP/ ZONE	ZONES 3 WIPS/ ZONE
CARD #1	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	1 - 30	1 - 10
CARD #2	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	31 - 60	11 - 20
CARD #3	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	61 - 90	21 - 30
CARD #4	ON	ON	OFF	OFF	OFF	OFF	ON	ON	91 - 120	31 - 40
CARD #5	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	121 - 150	41 - 50
CARD #6	ON	OFF	ON	OFF	OFF	OFF	ON	ON	151 - 180	51 - 60

Table 5: DIP Switch Settings


The FIB8910 Fire Indicator Panel/Break Glass Alarm Master Module has only a single Status Indicator LED which indicates 24V Power Supply to the card.

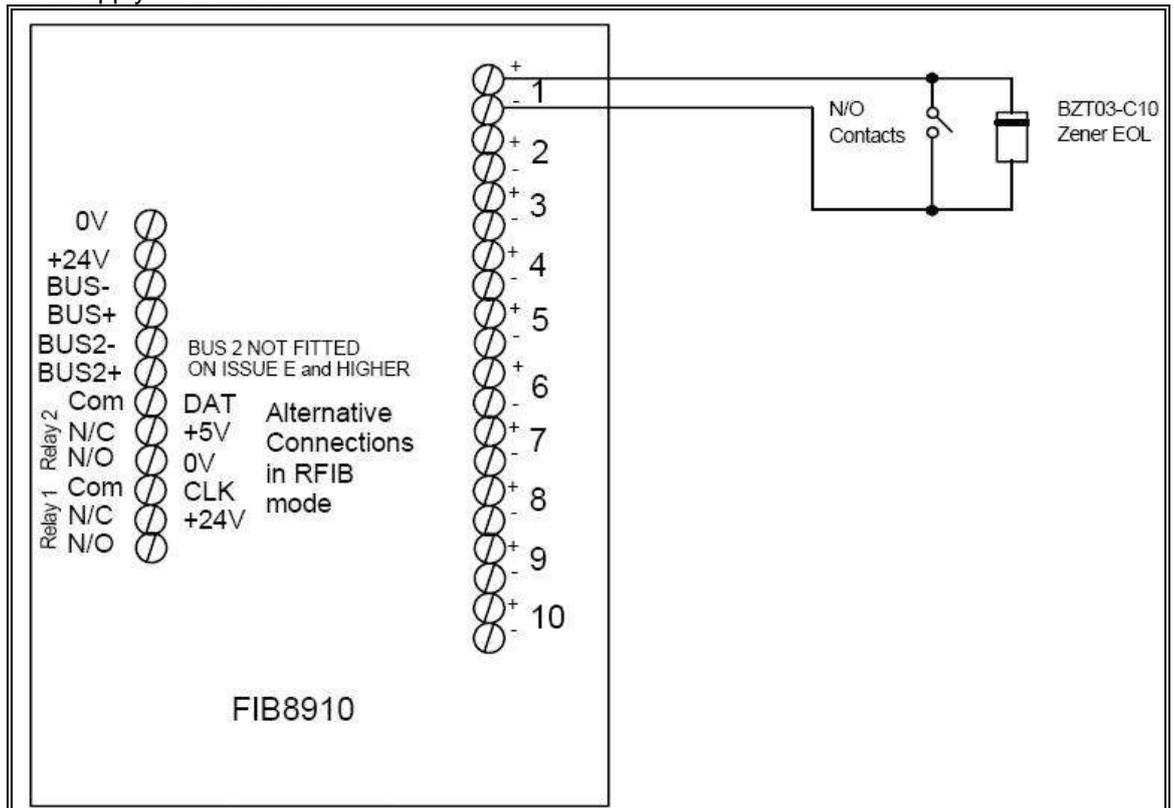

FIB8910 Termination Points and Example Wiring

5.6 WIP Line Fault

The WIPS2000 must connect to a WTRM2000 termination module. The WIPS9004 must connect to a WTRM9007 termination module. Do not swap them over.

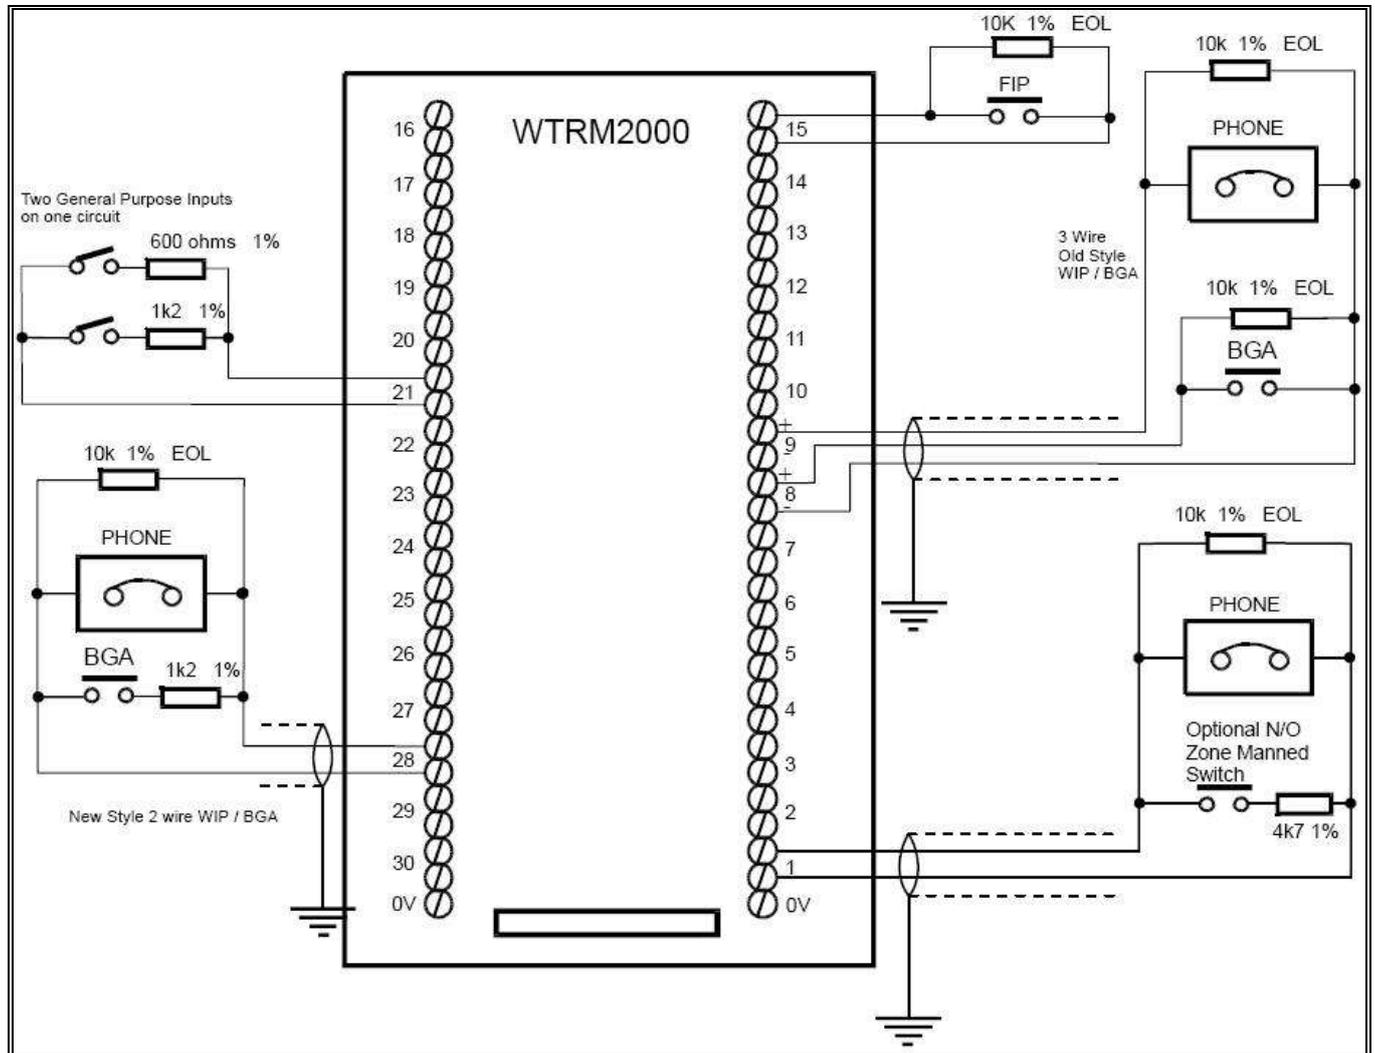

NOTE: WIP Line fault LEDs will flash (whilst un-acknowledged) when a WIP Line fault is detected in its *corresponding* Zone. For example, a flashing WIP Line Fault LED on Zone 2 will indicate a WIP Line fault associated with that Zone.


A WIPS Module Fault may be present if one or more WIP Line Fault LEDs are active. The zones in fault will indicate which WIP Module may be having issues/problems, as the lines in fault will be connected to this module.

If a WIP Line Fault is detected, you will need to check the wiring configuration (as above) and ensure the correct EOL (end of line) resistor has been installed. A WIP Line fault indicator LED will be located on the ECP in its corresponding Zone, depicting which WIP connection to focus on.

5.7 PA Speech, Spare Speech, WIP Speech, Comms and Spare Comms Cable Faults

PA Speech Cable Faults, Spare Speech Cable Faults, and WIP Speech Cable Faults refer to the connections between SPIF cards and Secondary ECPs and equipment racks (remote units). As can be seen in the Figure below, the PA Speech, Speech Backup, and WIP Speech terminals will correspond to the respective Fault on the ECP System Fault Display.

NOTE: Any WIPS Module Failure or WIP Speech cable fault will activate 'WIP SYSTEM FAULT' LED on the ECP System Fault Display. The LED will flash while unacknowledged and be steady for a latched or acknowledged fault.

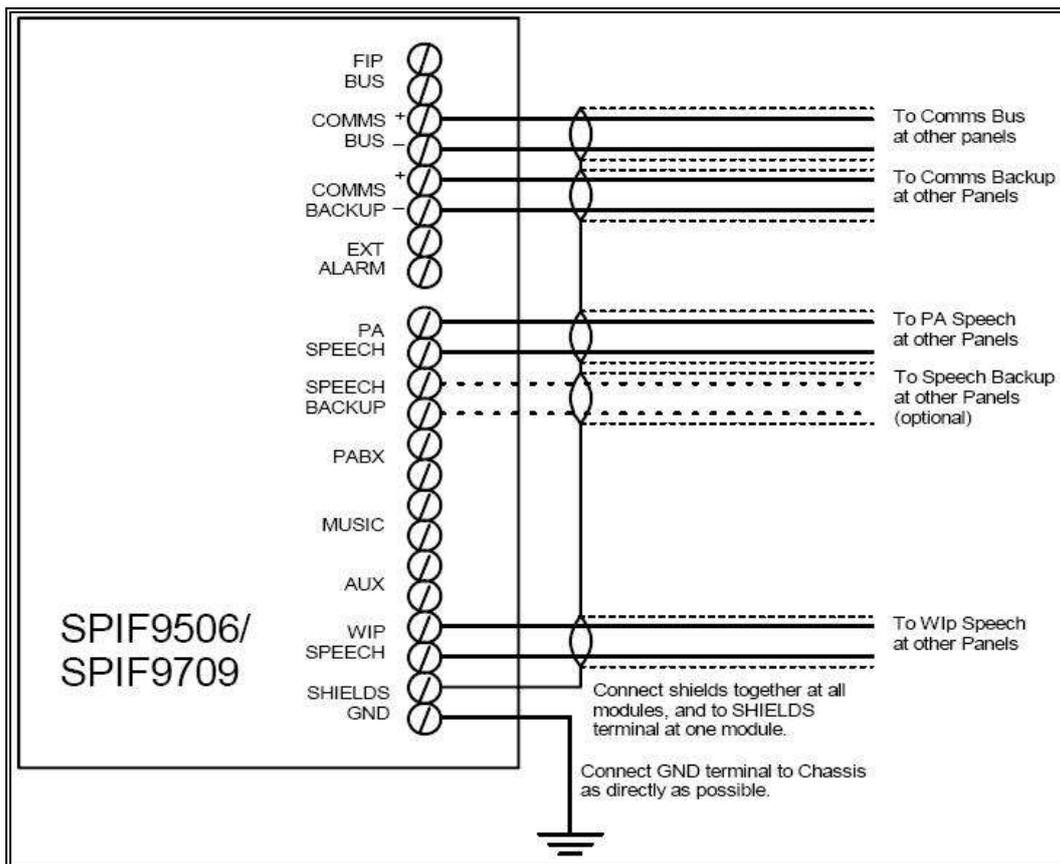

SPIF9506/ SPIF9709 Wiring Diagrams

Comms Cable Faults and Spare Comms Cable Faults on the ECP System Fault Display are related to the loss of communications between SPIF interfaces. The COMMS BUS and COMMS BACKUP terminals on a SPIF card (shown above) are relating to Comms Cable Faults and Spare Comms Cable Faults, respectively.

5.8 ECP Failures

5.8.1 MECP and SECP Failure

A MECP failure will be present on any SECP when communications is lost and/or the panel has failed to activate correctly. In a similar fashion, an SECP failure will be present when communications is lost and/or the panel has failed to activate correctly.

5.8.2 WIP MECP and SECP Failure

A WIP MECP failure will be present on any SECP when a WIP Line fault or WIPS Module failure is detected on the MECP. In a similar fashion, any WIP SECP failure will be present on any SECP when a WIP Line fault or WIPS Module failure is present on the SECP/s.


5.8.3 Paging Console Failure

A paging console failure will be observed when a loss of communication to the Paging console/s is discovered.

5.9 ECM Networked Systems

If you are having issues with an ECM Network and are unable to diagnose a fault/trouble – please contact your local Simplex® Personnel who will be able to assist.

5.10 ECM Networked System – System Fault Display

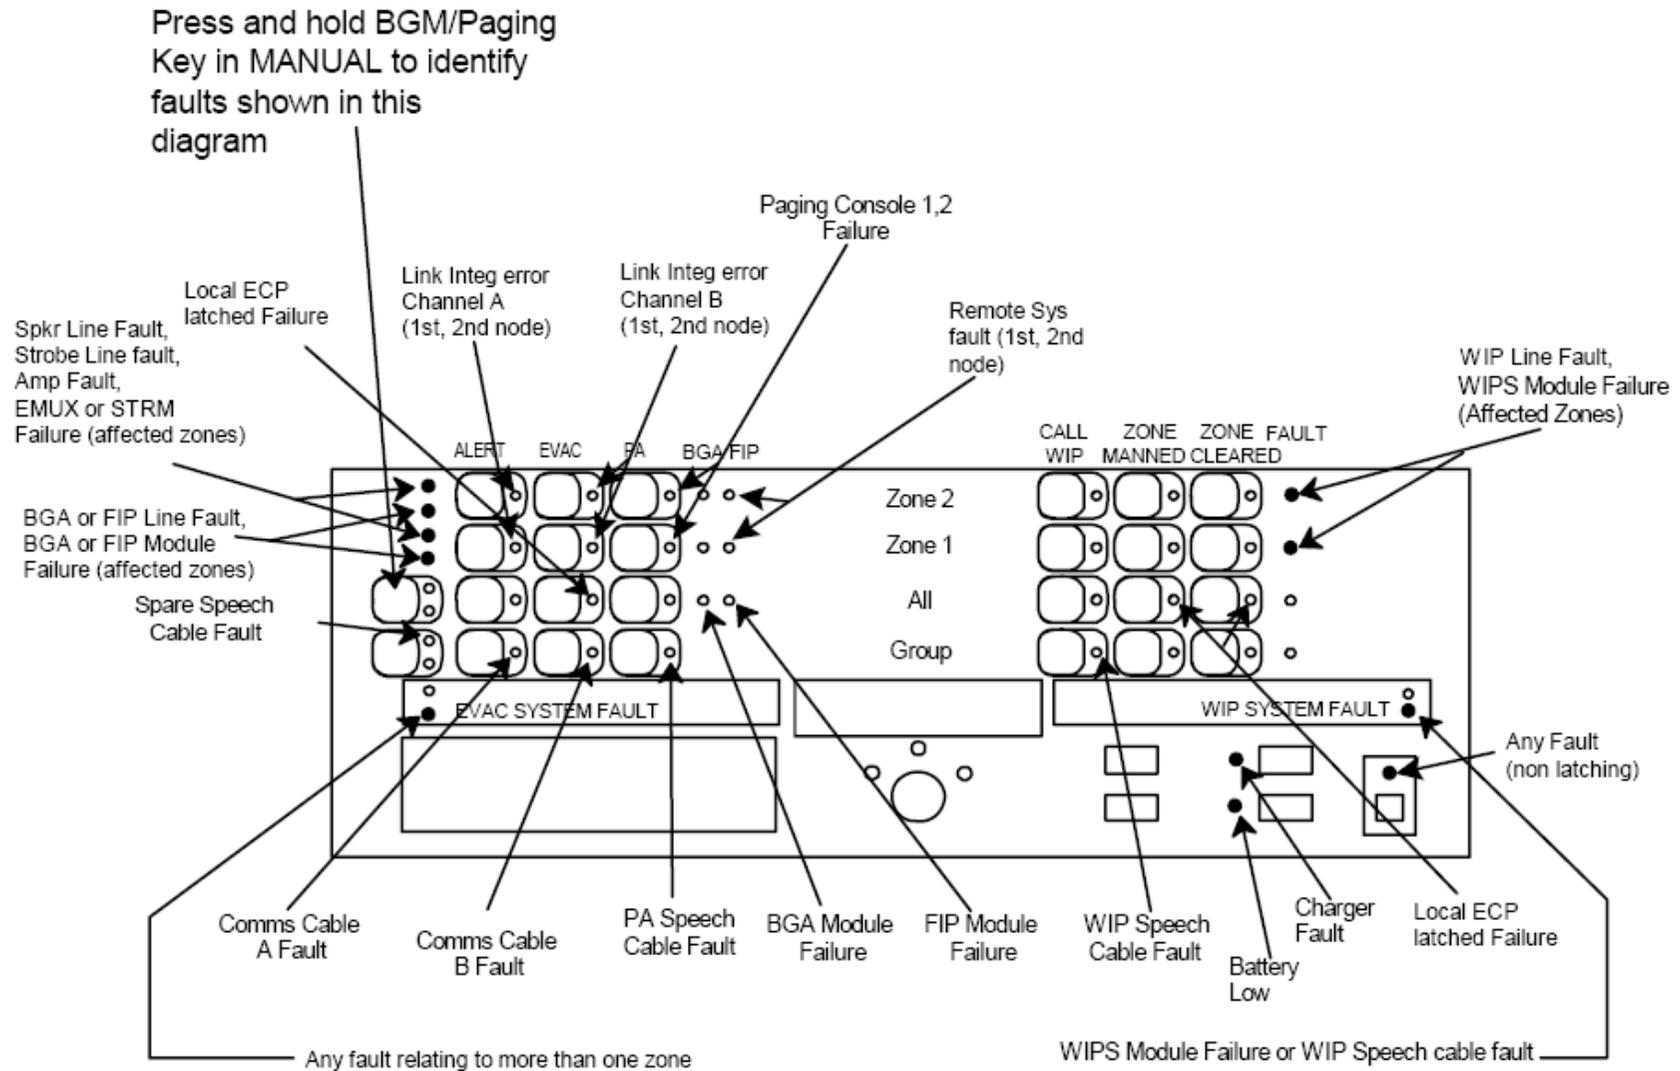

5.11 QE90 Fault Register

TROUBLE	QUESTIONS	POSSIBLE SOLUTIONS	REFERENCE
Programming	I don't get an alert phase in Auto mode, but I can select it and it works OK in Manual mode.	Several possibilities: Alert has been turned off; cascade has been turned off; cascade delays are not set up correctly; system has been specifically programmed that way.	LT0088 sections 24.3 (front panel programming) and 24.4 (serial port programming) or 20.7 (ECM network systems).
Tones	My alert (or other tone/signal) is too loud compared to the other tones/signals.	The levels of the following signals can be separately adjusted for each amplifier rack on that rack's EMUX card: PABX bus, PA Speech, Background Music, AUX bus, Digitised Speech, Alert Tone.	LT0088 section 15.8
Servicing	A QE90 is indicating an Audio Fault on some zones. I disconnected the speaker wiring and shifted the speaker line end of line resistors to directly across the transformer module terminals, but the faults are still present and will not reset. What else can cause this fault indication?	(a) Amplifier supervision faults. To check whether this is the case turn off the power, and remove the amplifier card that is generating the fault. Remove links 10 and 11 (on any amplifier type) to disable amplifier monitoring. If the faults can be reset when the amplifier is replaced, then the source of the fault is the amplifier supervision. Replace the amplifier card. (b) A Strobe module circuit fault can also cause this indication. To check whether the source of the fault is the Strobe Module (if present), look at red LED, LD4. Flashing = current line fault, Steady = latched line fault. (c) The Audio Fault LEDs will also be on for affected zones if the EMUX card controlling those amplifiers is faulty. In this case the Evacuation System Fault LED on the left hand side of the ECP Module will also be on.	LT0088 Sections 5.2.4, 8.6
Messages	The voice messages are too quiet and are muffled by the reverberation of the evacuation tone.	This can be improved with hand mods to the EMUX board. You can increase the level of the digitised speech keywords "emergency" and "evacuate now" by decreasing the value of the tacked on R125 (over XT1 position). Suggest connect a 56k resistor in parallel. Also decrease the evacuation tone level by increasing the value of R45, currently 22K, to 47K or even 56k. The alert tone pot will need to be backed off.	Blank

Design	If a zone is large and require two amplifier circuits, but they happen to be in separate racks with their own EMUX card, will the signal in the zone get out of sync?	Yes they will get out of sync. Emux cards cannot be synchronised. You should try to rearrange the amplifier for the same zone to be in the same rack. However if not possible you can use one rack amplifier as "master" for a zone and feed its 100V o/p through a voltage divider into the local input of amps of another rack (these amps being programmed to always select the local input), but to report faults to the zone.	Bulletin required. Refer LM0372 PA0646 ALIM9706 Audio Isolator User Instructions
Paging Console	Where can I find a master for the zone button naming label?	On the Fireplace under downloads/QE90. It is LB0367 and is available as a PDF or Excel Spreadsheet.	Fireplace
Front Panel	Where can I find a master for the QE90 fascia zone naming label?	On the Fireplace under downloads/QE90. It is LT0216 and is an MS Word Document.	Fireplace
Installation	A QE90 ECP system consist of and AMP rack and a remote MECF and SECP every now and again an All Amp fault LED comes up. I can be cleared soon after. What is the problem and how can it be fixed?	The ECP based system requires that the comms circuits are earthed at all ends. If there is electrical earth noise between these points, communications can fail temporarily. The all Amp fault indicates a communications fault. The most successful solution will be to upgrade the system to an ECM base configuration. The lack of earthing that should be earthed can contribute see PBQ0080	LT0088 Fig 16.4 PBQ0080
Servicing	When powered up, the Alert, Evac and PA Indicators for Zone 2 were found to be flashing together. What does this mean?	Zone 2 has been isolated with the service isolate facility accessible via the On-Site Programming facility. This shouldn't normally happen by itself, but has been noted to happen occasionally, presumably because the ECP software hasn't cleared the applicable memory location for some reason. To clear, enter the service fault table display as outlined in LT0088 Ch24.3 Step 6, and press the hidden key under the "LINE FAULT" text.	LT0088 section 24.3
Programming	A QE90 non-ECM needs to be programmed with changes, but when connecting the PC terminal to the SPIF and pressing enter, it returns with unrecognisable characters. The QE90 connects to an FIP RZDU port. How can I get it into programming mode?	The ECP only has one serial port to connect via the SPIF or SE9004 issue C, and when set up for 1200 baud RZDU interfacing to the FIP, the port cannot be used for programming, normally at 9600 baud. You have to program it via the front panel in this case. The manual issue 4 does not make this clear but will be corrected in future manuals.	LT0088 section 24.3
Servicing	Building occupants are complaining that they can hear a hissing noise from the speakers when the room is quiet.	Ensure that the Local Input Links on the Amplifier are in the "Silence" position unless they are terminated into a low impedance equipment output. If the amplifier inputs are programmed for BGM or PABX, ensure that these inputs are either shorted out if not used, or terminated into low impedance outputs from the BGM or PABX equipment.	LT0088 Section 5.2.3

Messages	In a large zone with multiple amplifiers across several card cages, how can I get tone and message synchronisation?	Use one amplifier in the zone as a "master" and configure all the amplifiers for the same zone in other card racks as "slaves" - use an ALIM modified per fig 3 of LT0372 to monitor the "master" amplifier's 100V line and feed it to the local audio input of the "slaves". "Slaves" supervise their speaker line, but don't ever select anything but the local input.	LT0372 (also PBQ0072 for general ideas like this)
Installation	Simplex® T3 Strobes not functioning	Simplex® T3 strobes only work on EVAC. 1) The Positive should be wired to Terminal B and the Negative should be wired to Terminal A. 2) Dip switch setting (5, 6, 7, 8) have to be (OFF, ON, ON, ON)	PBQ0095
Servicing	Comms light (yellow) is not flashing. One LED (green) is flashing; 8-10V between comms. Panel displays zones 3, 4 & 5 in Audio Fault.	The panel has Faulty Strobe Card. After swapping two strobe cards over, the fault cleared from the panel and followed the faulty strobe card (when tested in another panel).	
Servicing	An Audio line fault is observed on Zones 2 & 3	After replacing the amps and transformers the fault still did not clear. The ribbon cable may be at fault or damaged. The red ribbon should point to pin number 1.	



6.0 National Contact Directory



6.1 Contact Us

To contact Simplex® Fire Products in Australia please call our National Support Number

National Support Phone Number:

131 491

Branch	Office
Sydney	Unit 4, 2-8 South Street RYDALMERE NSW 2116 Phone: (02) 9638 8280 Fax: (02) 9638 8285
Melbourne	47 Gilby Road NOTTING HILL VIC 3149 Phone: (03) 9538 7250 Fax: (03) 9538 7200 Freecall: 1300 552 559
Brisbane	34 Corporate Drive, CANNON HILL QLD. 4170 Phone: (07) 3318 6900 Fax: (07) 3318 6992
Perth	1 Eyre St., RIVERVALE W.A. 6103 Phone: (08) 9479 2999 Fax: (08) 9479 2883

www.simplex.com.au