## **5** Simplex

**UL** Listed

### True Alarm® Analog Sensing

TrueAlarm Multi-Sensor 4098-9754, Compatible Bases, and Accessories

#### **Features**

## TrueAlarm photoelectric sensing and TrueAlarm thermal sensing combined in one housing\*:

- TrueAlarm photoelectric technology accurately monitors for smoke activity
- TrueAlarm thermal sensing accurately monitors for fixed temperature and rate-of-rise temperature, selected or combined as required per sensor
- Basic operation is UL listed to Standard 268
- Sounder operation is also listed to UL Standard 464 as an audible notification appliance

#### Multi-Sensor Base 4098-9796 provides:

- Two sequentially addressed points, automatically assigned with one address selection
- Connections for remote LED or LED tracking relay for remote alarm status indication

### Multi-Sensor Sounder Base 4098-9795 provides the features of 4098-9796 and also provides:

- Built-in piezoelectric sounder with high output (88 dBA) and low current requirements (17 mA)
- Sounder power can be from 24 VDC or from a compatible Notification Appliance Circuit (NAC)
- Sounder operation can be independently activated from the host control panel
- Sounder output can be synchronized via communications\*\* or by the NAC, if NAC powered

#### TrueAlarm analog sensing operation:


- Analog sensor information is digitally communicated to the control panel via MAPNET II<sup>®</sup> or IDNet<sup>TM</sup> two-wire communications\*
- Individual sensor information is processed by the host control panel to determine sensor status

For use with Simplex control panel models 4010, 4020, 4100, 4120, and Universal Transponders


# Functional and architecturally styled enclosures are for ceiling or wall mounting:

- Smoke sensor louver design directs air flow to chamber, enhancing smoke capture
- Sound louvers on sounder base exit both front and side for high output sound
- Built-in magnetic test feature alarms both addresses when activated

### Optional accessories include remote alarm LED indicator or alarm LED tracking relay

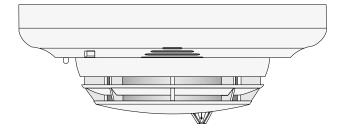

TrueAlarm Multi-Sensor 4098-9754 Mounted in Multi-Sensor Sounder Base 4098-9795

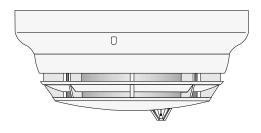

TrueAlarm Multi-Sensor 4098-9754 Mounted in Multi-Sensor Base 4098-9796

#### **TrueAlarm Multi-Sensor Description**

TrueAlarm multi-sensor 4098-9754 combines the established performances of a TrueAlarm photoelectric smoke sensor with a fast-acting and accurate TrueAlarm thermal sensor to provide both features in a single sensor/base assembly.

#### **Digital Communication of Analog Sensing.**

Analog information from each sensor is digitally communicated to the control panel where it is analyzed. Photoelectric sensor input is stored and tracked as an average value with an alarm or abnormal condition being determined by comparing the sensor's present value against its average value. Thermal data is processed to look for absolute or rate-of-rise temperature as desired.

Intelligent Data Evaluation. Monitoring each photoelectric sensor's average value provides a software filtering process that compensates for environmental factors (dust, dirt, etc.) and component aging, providing an accurate reference for evaluating new activity. The result is a significant reduction in the probability of false or nuisance alarms caused by shifts in sensitivity, either up or down.

- \* TrueAlarm analog sensing and MAPNET and IDNet communications are protected by one or more of the following U.S. Patents: 5,155,468; 5,173,683; 5,543,777; 5,400,014; 5,552,765; 5,552,763; 4,796,025; DES. 377,460.
- \*\* Total quantity of sounder bases available for coding on the same communications channel may vary with panel application and availability of NAC power. Refer to specific control panel requirements.

#### **Description** (Continued)

**Control Panel Selection.** Peak activity per sensor is stored to assist in evaluating specific locations. The alarm set point for each TrueAlarm sensor is determined at the control panel, selectable as more or less sensitive as the individual application requires.

**Timed/Multi-Stage Selection.** Alarm set points can be programmed for timed automatic sensitivity selection (such as more sensitive at night, less sensitive during day). Control panel programming can also provide multi-stage operation per sensor. For example, a 0.2% level may cause a warning to prompt investigation while a 2.5% level may initiate an alarm.

Sensor Alarm and Trouble LED Indication. Each sensor base's LED pulses to indicate communications with the panel. If the control panel determines that a sensor is in alarm, or that it is dirty or has some other type of trouble, the details are annunciated at the control panel and that sensor base's LED will be turned on steadily. During a system alarm, the control panel will control the LEDs such that an LED indicating a trouble will return to pulsing to help identify the alarmed sensors.

#### **True Alarm Analog Sensor Features**

### Sealed against rear air flow entry Electronics are EMI/RFI shielded Smoke sensing:

- Photoelectric sensing technology
- 360° smoke entry for optimum response
- Chamber screen provides protection from dirt, dust, and insects

#### Heat sensing:

- Fast response thermistor design
- Rate compensated, self-resetting operation
- Control panel can select per sensor for fixed temperature sensing, rate-of-rise temperature sensing, or the combination of both

#### **Photoelectric Sensing**

TrueAlarm photoelectric sensors use a stable, pulsed infrared LED light source and a silicon photodiode receiver to provide consistent and accurate low power smoke sensing. Seven levels of sensitivity are available for each individual sensor, ranging from 0.2% to 3.7% per foot of smoke obscuration. Sensitivity is selected and monitored at the fire alarm control panel.

The sensor head design provides 360° smoke entry for optimum smoke response. Because of the photoelectric sensing technology, the 4098-9754 sensor is UL listed for air velocity of up to 2000 ft/min. However, care must be taken in determining sensor locations to avoid areas where local airflow may also impact any smoke flow. (Refer to the application reference section on this page.)

#### **Heat Sensing**

TrueAlarm heat sensors monitor a fast reacting thermistor providing operation that is self-restoring and rate compensated. Due to its small thermal mass, the sensor accurately and quickly measures the local temperature for analysis at the fire alarm control panel. The control panel allows alarm selection to be per sensor as fixed temperature, or rate-of-rise temperature, or the combination of both.


Rate-of-rise temperature detection is selectable at the control panel for either 15° F (8.3° C) or 20° F (11.1° C) per minute. Fixed temperature sensing is independent of rate-of-rise sensing and selectable to operate at 135° F (57.2° C) or 155° F (68° C). In a slow developing fire, the temperature may not increase rapidly enough to operate the rate-of-rise feature. However, an alarm will be initiated when the temperature reaches its selected fixed temperature setting.

TrueAlarm heat sensors can be programmed as a utility device to monitor for temperature extremes in the range from 32° F to 122° F (0° C to 50° C). This feature can provide freeze warnings or alert to HVAC system problems. (Refer to specific panels for availability.)


#### **Application Reference**

Sensor locations should be determined after careful consideration of the physical layout and contents of the area to be protected. Refer to NFPA 72, the *National Fire Alarm Code*. On smooth ceilings, smoke sensor spacing of 30 ft (9.1 m) may be used as a guide. For detailed application information, refer to 4098 Detectors, Sensors, and Bases Application Manual, Part Number 574-709.

#### **Installed Dimension Reference**

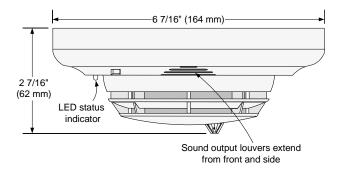

Multi-Sensor with 4098-9795 Multi-Sensor Sounder Base

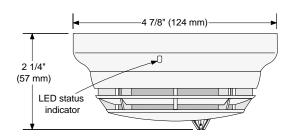

Multi-Sensor with 4098-9796 Multi-Sensor Base

S4098-0033 11/99

#### **Multi-Sensor Base Features**

**Base mounted address selection** allows the addresses of the multi-sensor base to remain with its programmed location when the sensor is removed for service.

**Integral red LED** indicates power-on by pulsing, or alarm or trouble when steady on, reflecting status of either sensor. The exact status of the specific sensing element is annunciated at the fire alarm control panel.

#### **Fire Alarm Control Panel Features**


Individual smoke sensitivity and temperature operation is selectable for each sensor

#### Fire Alarm Control Panel Features (Cont'd)

- Sensitivity monitoring that satisfies NFPA 72 sensitivity testing requirements
- Peak value logging allows accurate analysis for sensitivity selection
- Automatic, once per minute individual sensor calibration check verifies sensor integrity
- Multi-stage alarm operation
- Selectable alarm verification
- Ability to correlate sensitivity selection with temperature
- Automatic environmental compensation
- Smoke sensitivity displayed in percent per foot
- Ability to display and print detailed sensor information in plain English language

#### **Mounting Reference**

Electrical boxes are supplied by others, refer to notes below for additional information

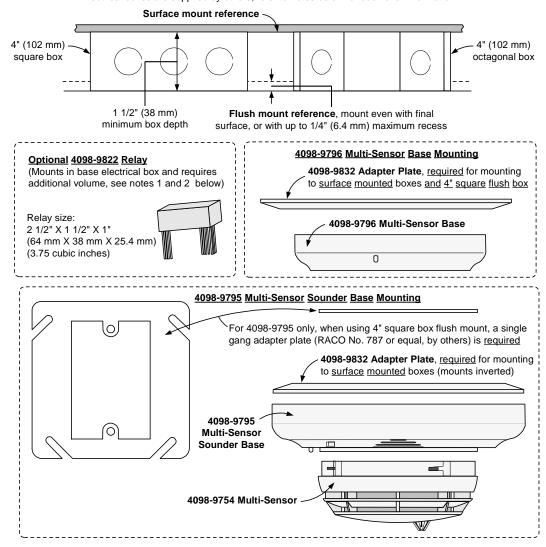

#### NOTES:

- 1. Review wire size, wire count, box type, and whether 4098-9822 relay is used before determining box size.
- 2. When 4098-9822 relay is used, mount relay in electrical box and use 1 1/2" extension ring (by others) on 4" square or octagonal box of 1 1/2" or 2 1/8" depth as required.
- 3. Flush mounting also fits a single gang box, 2 1/8" (51 mm) deep if compatible with wiring requirements. (Not applicable if 4098-9822 relay is used.)
- 4. Refer to Installation Instructions 574-707 for additional information.

### **TrueAlarm Multi-Sensor Product Selection Chart**

TrueAlarm Multi-Sensor	' (ordered separately,	refer to page 3 for	mounting requirements)
------------------------	------------------------	---------------------	------------------------

Model	Description
4098-9754	Multi-sensor, photoelectric sensor with integral thermal sensor, for use with bases 4098-9795 and 4098-9796

#### TrueAlarm Multi-Sensor Bases (ordered separately, refer to page 3 for mounting requirements)

Model	Description		
4098-9796	Multi-Sensor base	With connections for remote LED alarm indicator <b>or</b> unsupervised relay	
4098-9795	Multi-Sensor Sounder base		

#### Accessories (ordered separately as required, refer to page 3 for additional mounting requirements)

Model	Description			
4098-9832	Adapter Plate, 6 3/8" (162 mm) diameter, 1/4" (6.4 mm) deep, matches bases, required for some mounting combinations			
2098-9808	2098-9808 Choose <b>one</b> if required	Red LED Alarm Indicator on single gang stainless steel plate, mounts on single gang box, 1 1/2" minimum depth		
4098-9822		Relay with operation that tracks base LED status, mounts in base electrical box, 4" square or octagonal box with 1 1/2" (38 mm) extension ring, select box depth per actual wiring requirements		

#### **Specifications**

General Operating Specificat	ions		
Communications and Sensor S		MAPNET II or IDNet, auto-select, 24-40 VDC w/data, 400 μA typical, supplied by control panel, 2 addresses per base	
Communications and Sounder Power Connections		Screw terminals for in/out wiring, #18 to #14 AWG	
Remote LED Alarm	Current	1 mA typical supplied from communications, no impact to alarm current	
Indicator	LED Connections	Color coded wire leads, #18 AWG	
UL Listed Temperature Range		32° F to 100° F (0° C to 38° C)	
Operating Temperature Range		32° F to 122° F (0° C to 50° C)	
Humidity Range		10 to 95% RH	
Smoke Sensor Sensitivity Range		0.2 % to 3.7% per foot of smoke obscuration, selectable at host control panel	
Smoke Sensor Air Velocity Range		0-2000 ft/min (0-610 m/min)	
Thermal Sensor Operation (selected at host control panel)		Fixed alarm temperature setting of 135° F (57.2° C), and/or rate-of-rise temperature alarm at 15° F (8.3° C) or 20° F (11.1° C), also selectable as utility monitoring operation from 32° F to 122° F (0° C to 50° C), availability is panel dependent	
Altitude		Up to 8000 ft (2.4 km)	
Sensor, Bases, and Adapter P	ate Color	Frost White	
Sounder Operation with 4098-9795 Multi-Ser		nsor Sounder Base	
Sounder Voltage		18 to 32 VDC from steady external source or from NAC	
Alarm Current (Sounder On)		17 mA @ 24 VDC, 20 mA maximum @ 32 VDC	
Sounder Output		88 dBA minimum @ 10 ft (3 m) per UL Standard 464, Audible Signaling Appliances and UL Standard 268, Smoke Detectors for Fire Protective Signaling Systems	
Sounder Power Supervision	Supervised	Select for continuous 24 VDC power, loss of power is communicated to panel	
(Selectable)	Unsupervised	Select when connected to NAC for sounder power, NAC provides supervision	
NAC Powered Operation		When sounder is activated by control panel, sounder output tracks connected NAC to allow synchronized coding (Temporal or March Time, etc.)	
4098-9822 Unsupervised Rel	ay Option		
Externally Supplied Relay Voltage		18-32 VDC, steady source recommended (connects to remote LED leads)	
Alarm Current		13 mA from separate 24 VDC supply	
Contact Ratings, DPDT contacts for resistive/suppressed loads		Power limited rating: 2 A @ 30 VDC	
		Non-power limited rating: 1/2 A @ 120 VAC	
Relay Operation		Tracks base LED status, relay is on with trouble or alarm at the base	

Simplex, the Simplex logo, TrueAlarm, MAPNET, and IDNet are either trademarks or registered trademarks of Simplex Time Recorder Co. in the U.S. and/or other countries. NFPA 72 is a registered trademark of the National Fire Protection Association (NFPA).

